




On first use of the PMT, user is taken directly to the 'all preferences' tab

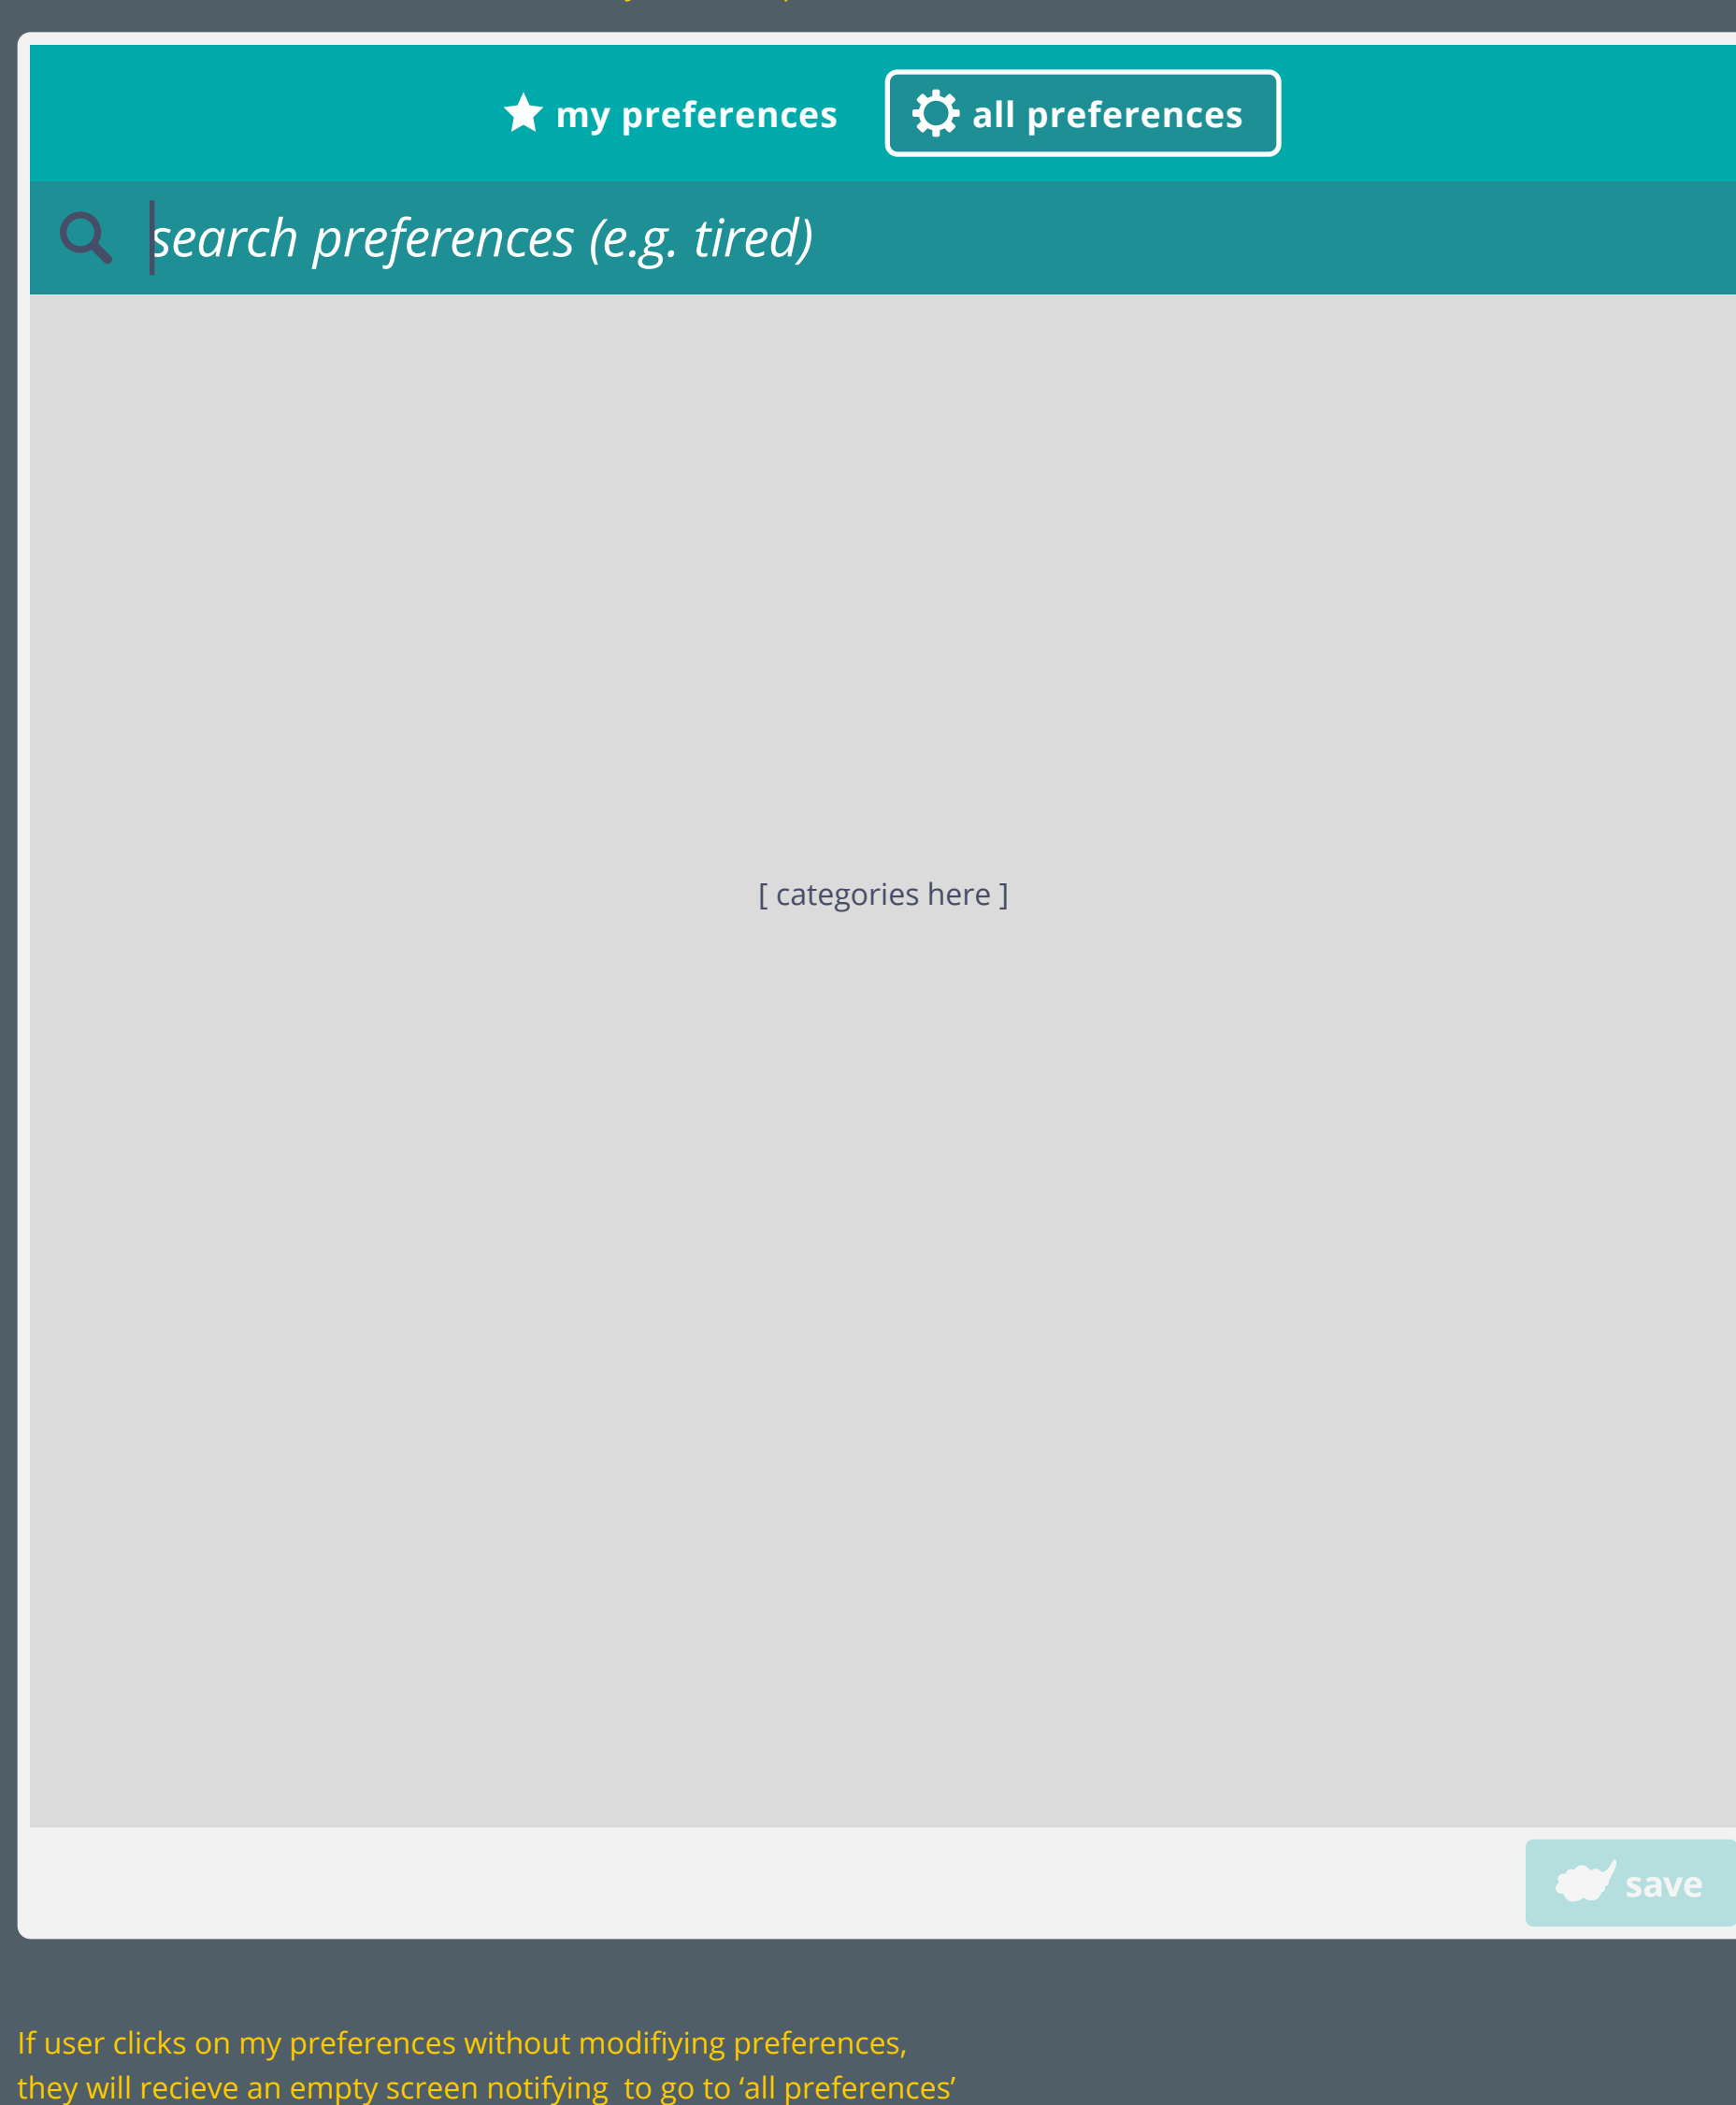


If user clicks on my preferences without modifying preferences, they will receive an empty screen notifying to go to 'all preferences'

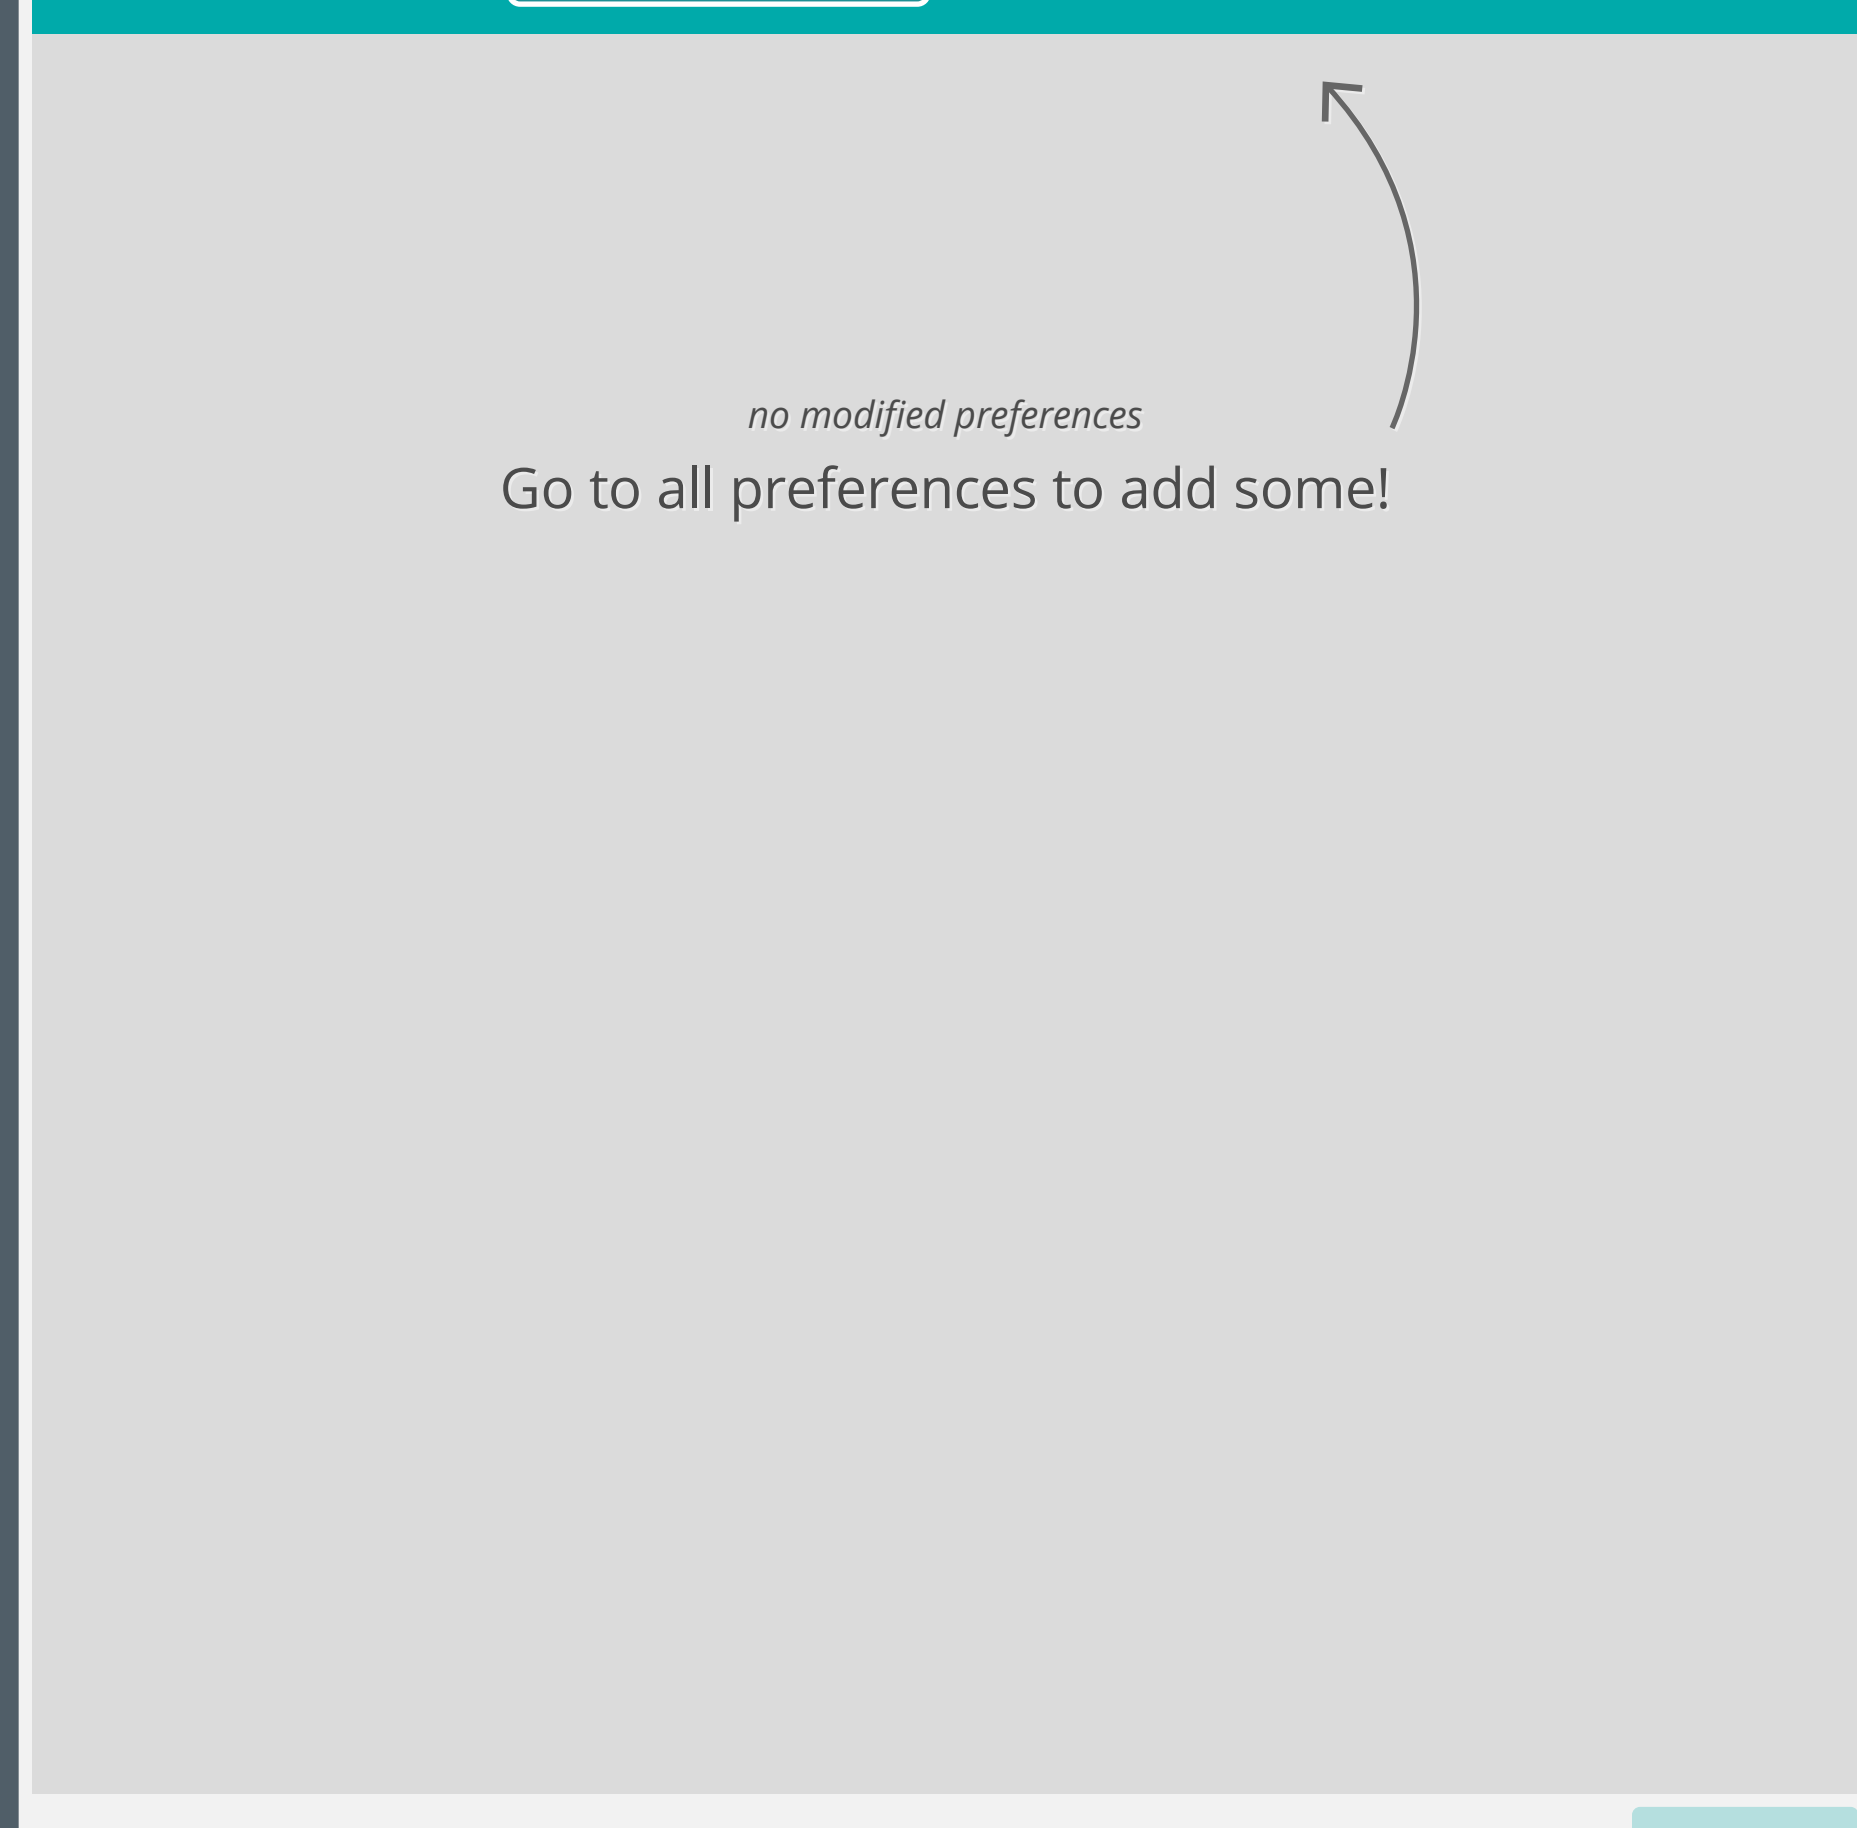


After use personalized recommendations appear in 'all preferences' tab

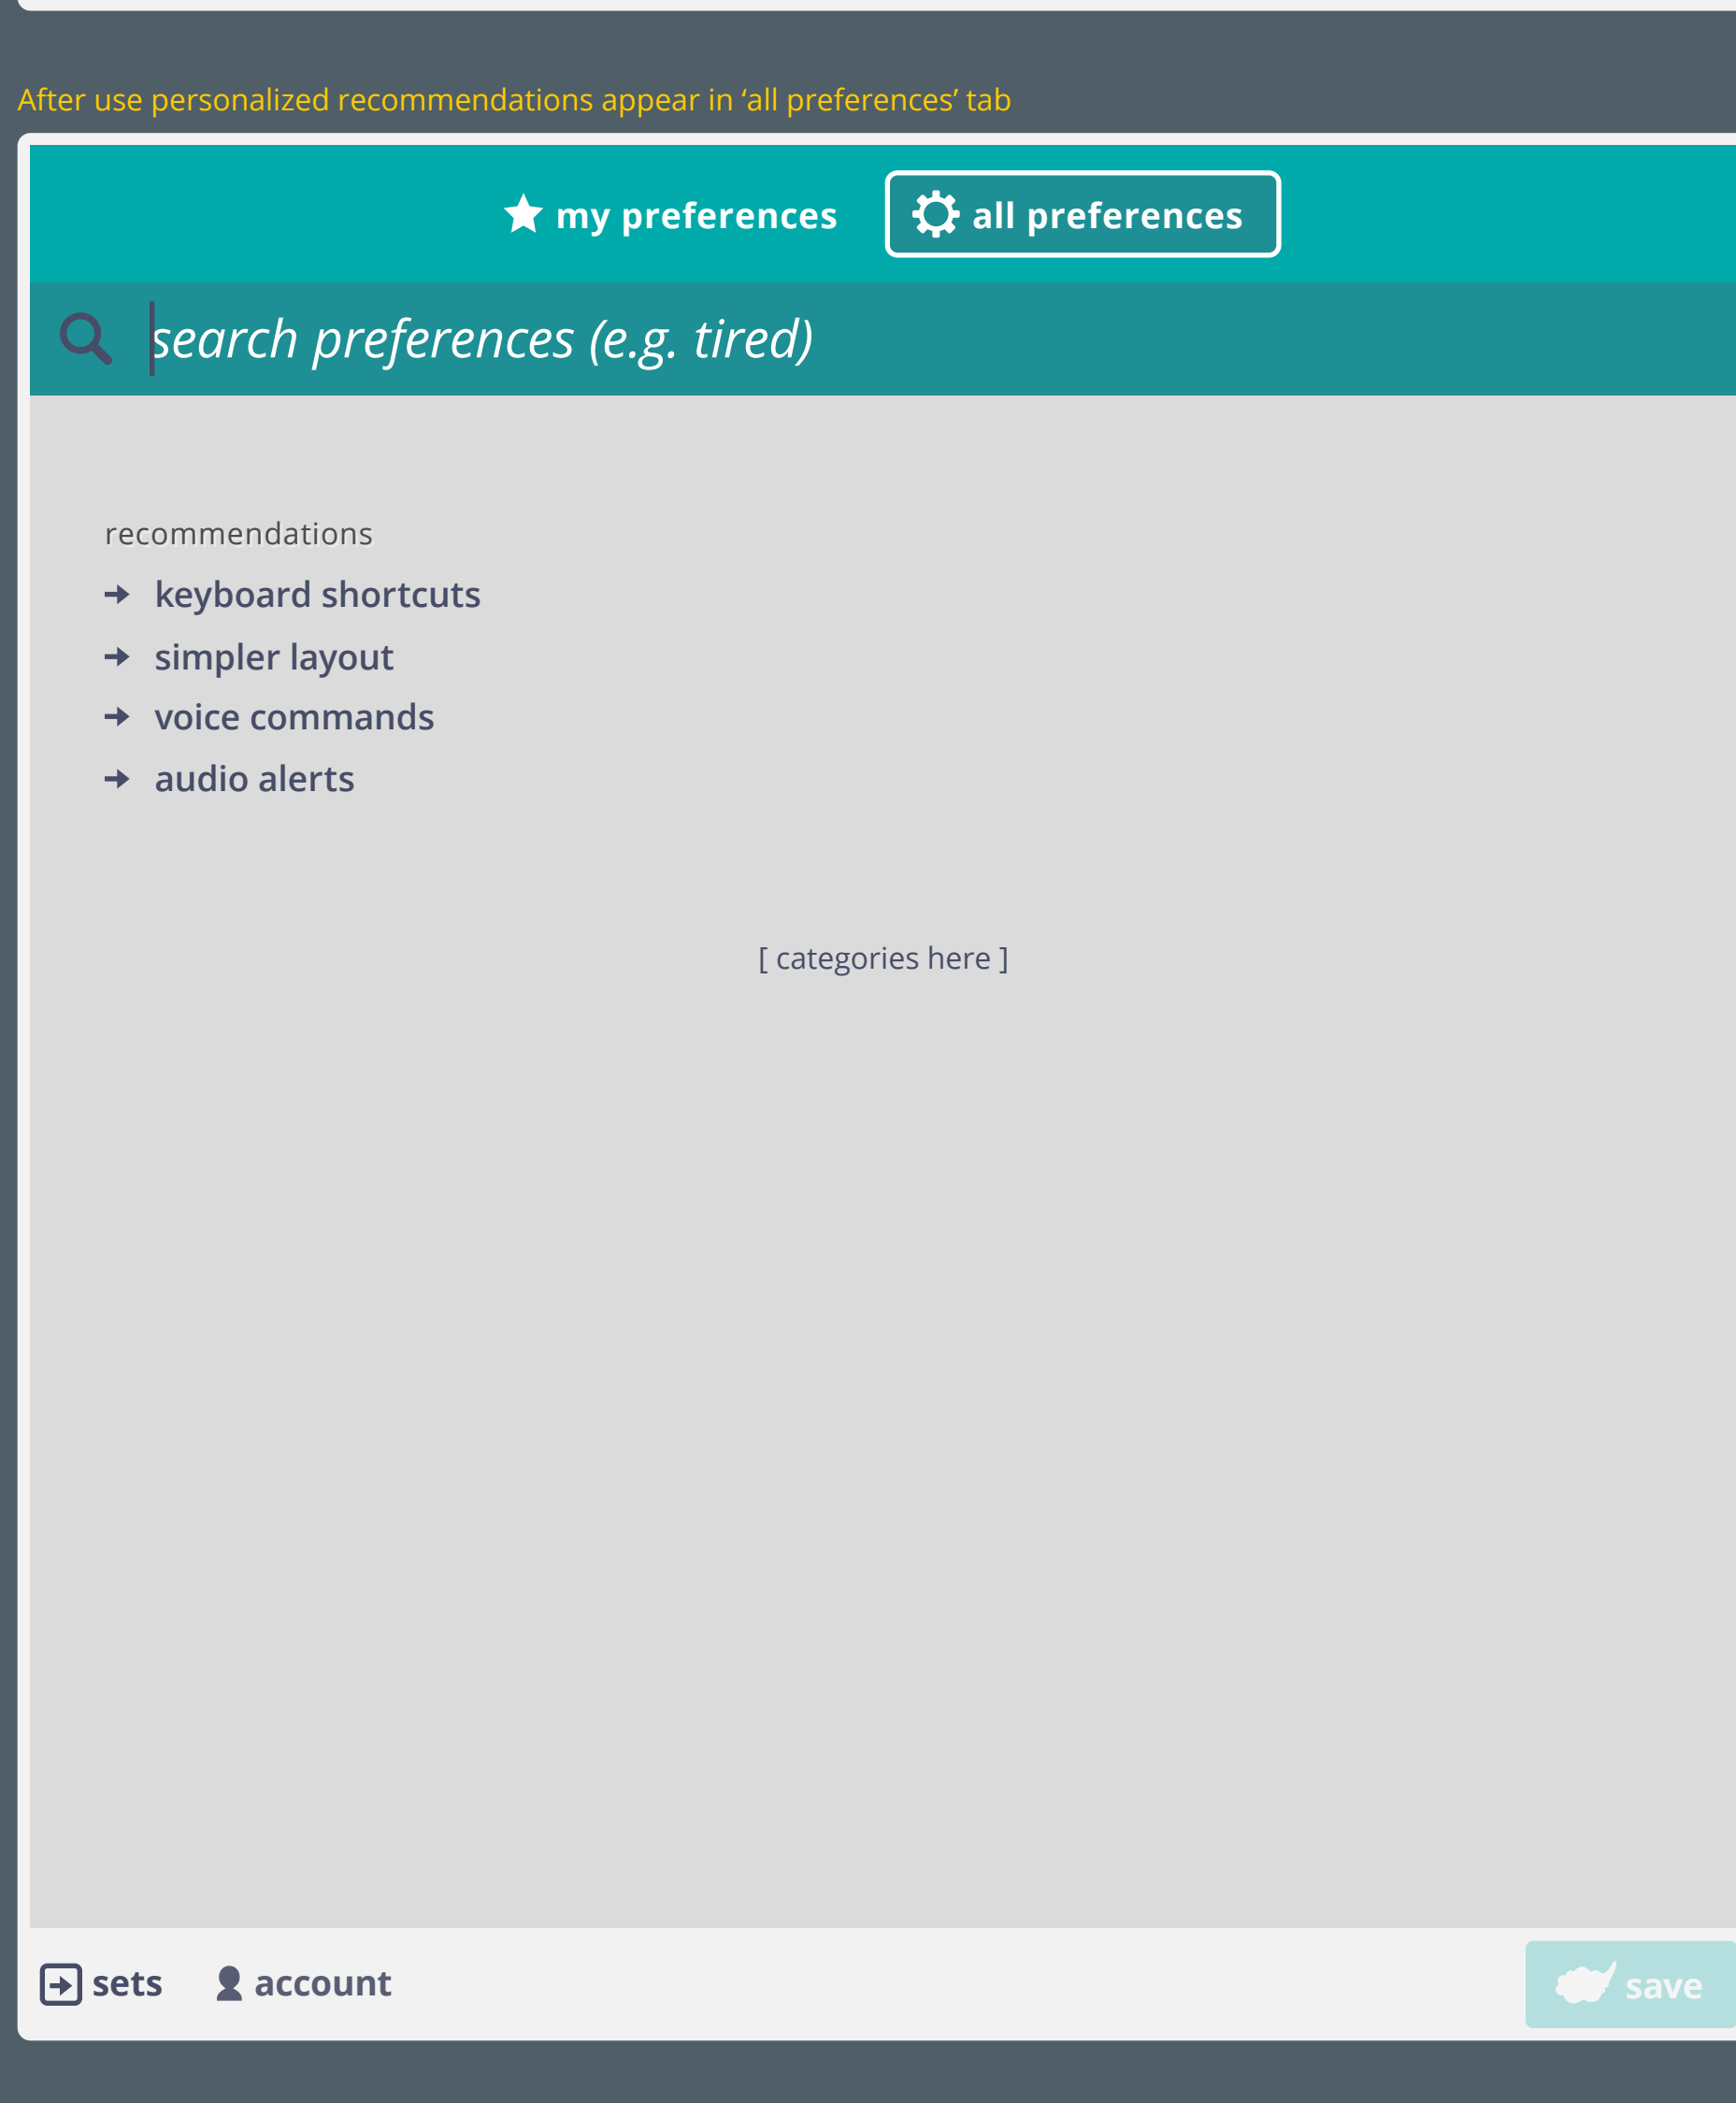


Accessing a category or entering search term presents a combination of preference families (right) and presets (fixed on left)

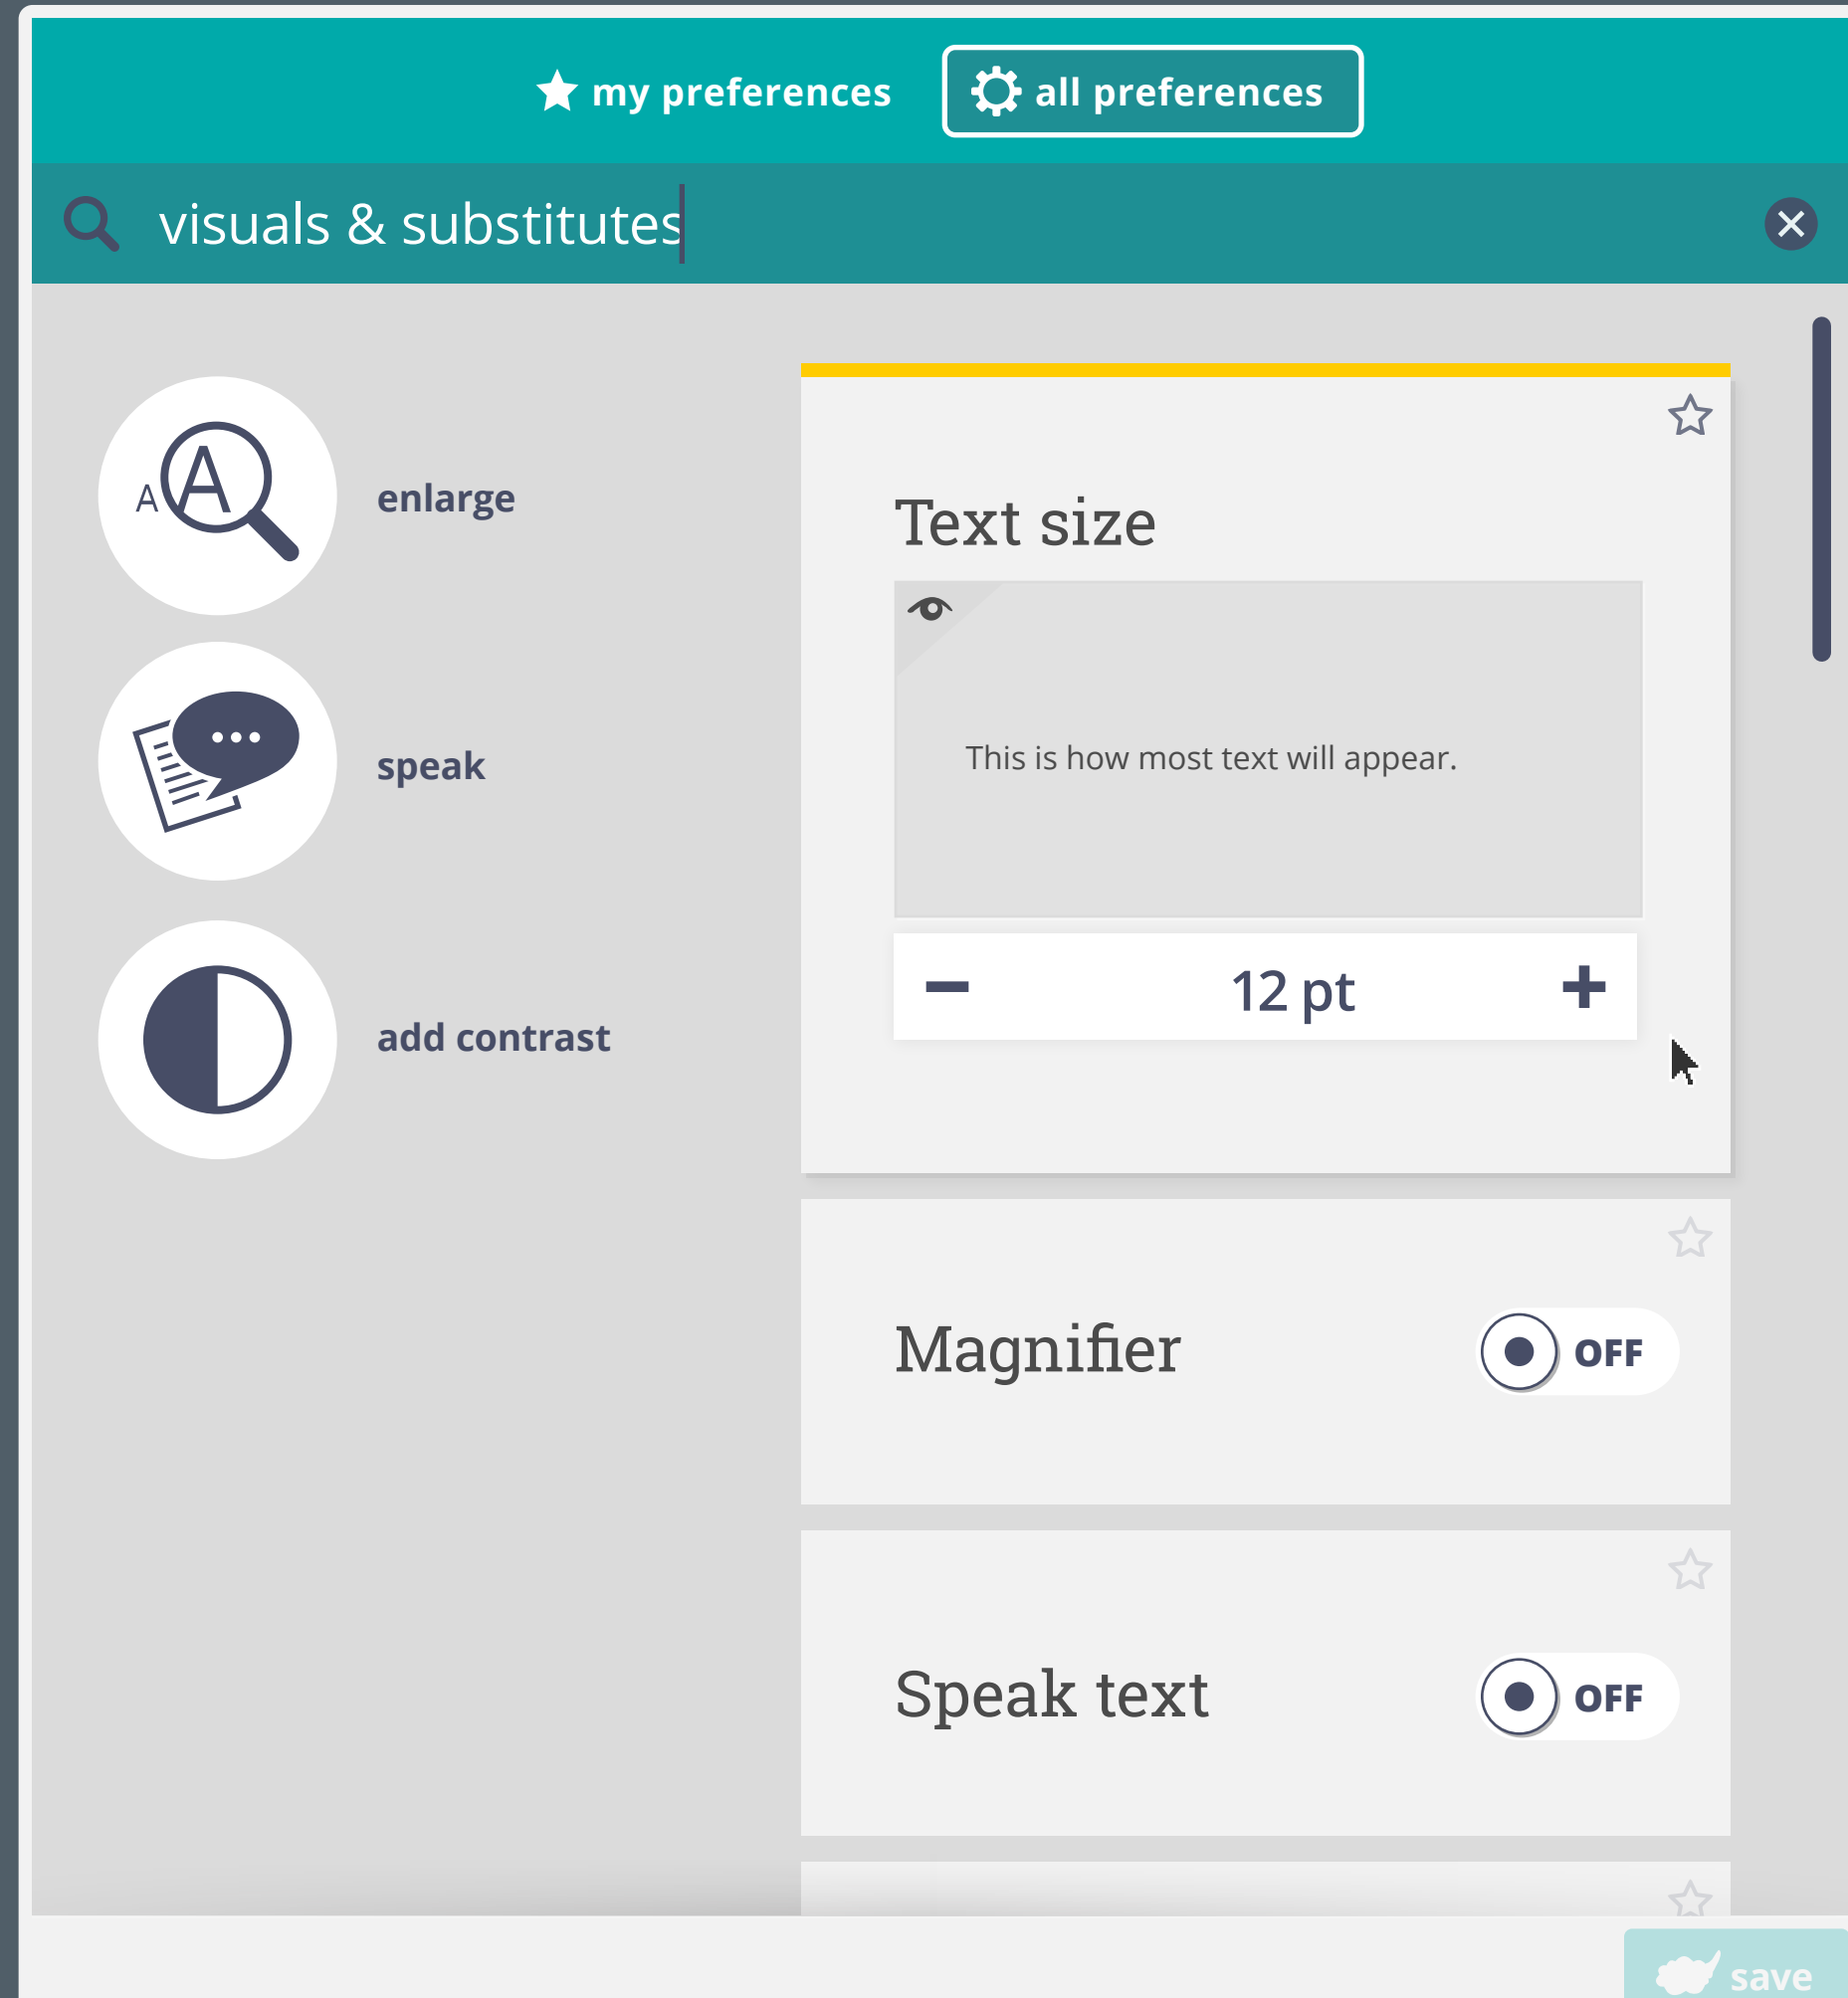


Selecting a preset (on the left) modifies the preferences (on the right). A highlight indicates the modified preferences. Highlight fades out when another adjuster is modified.

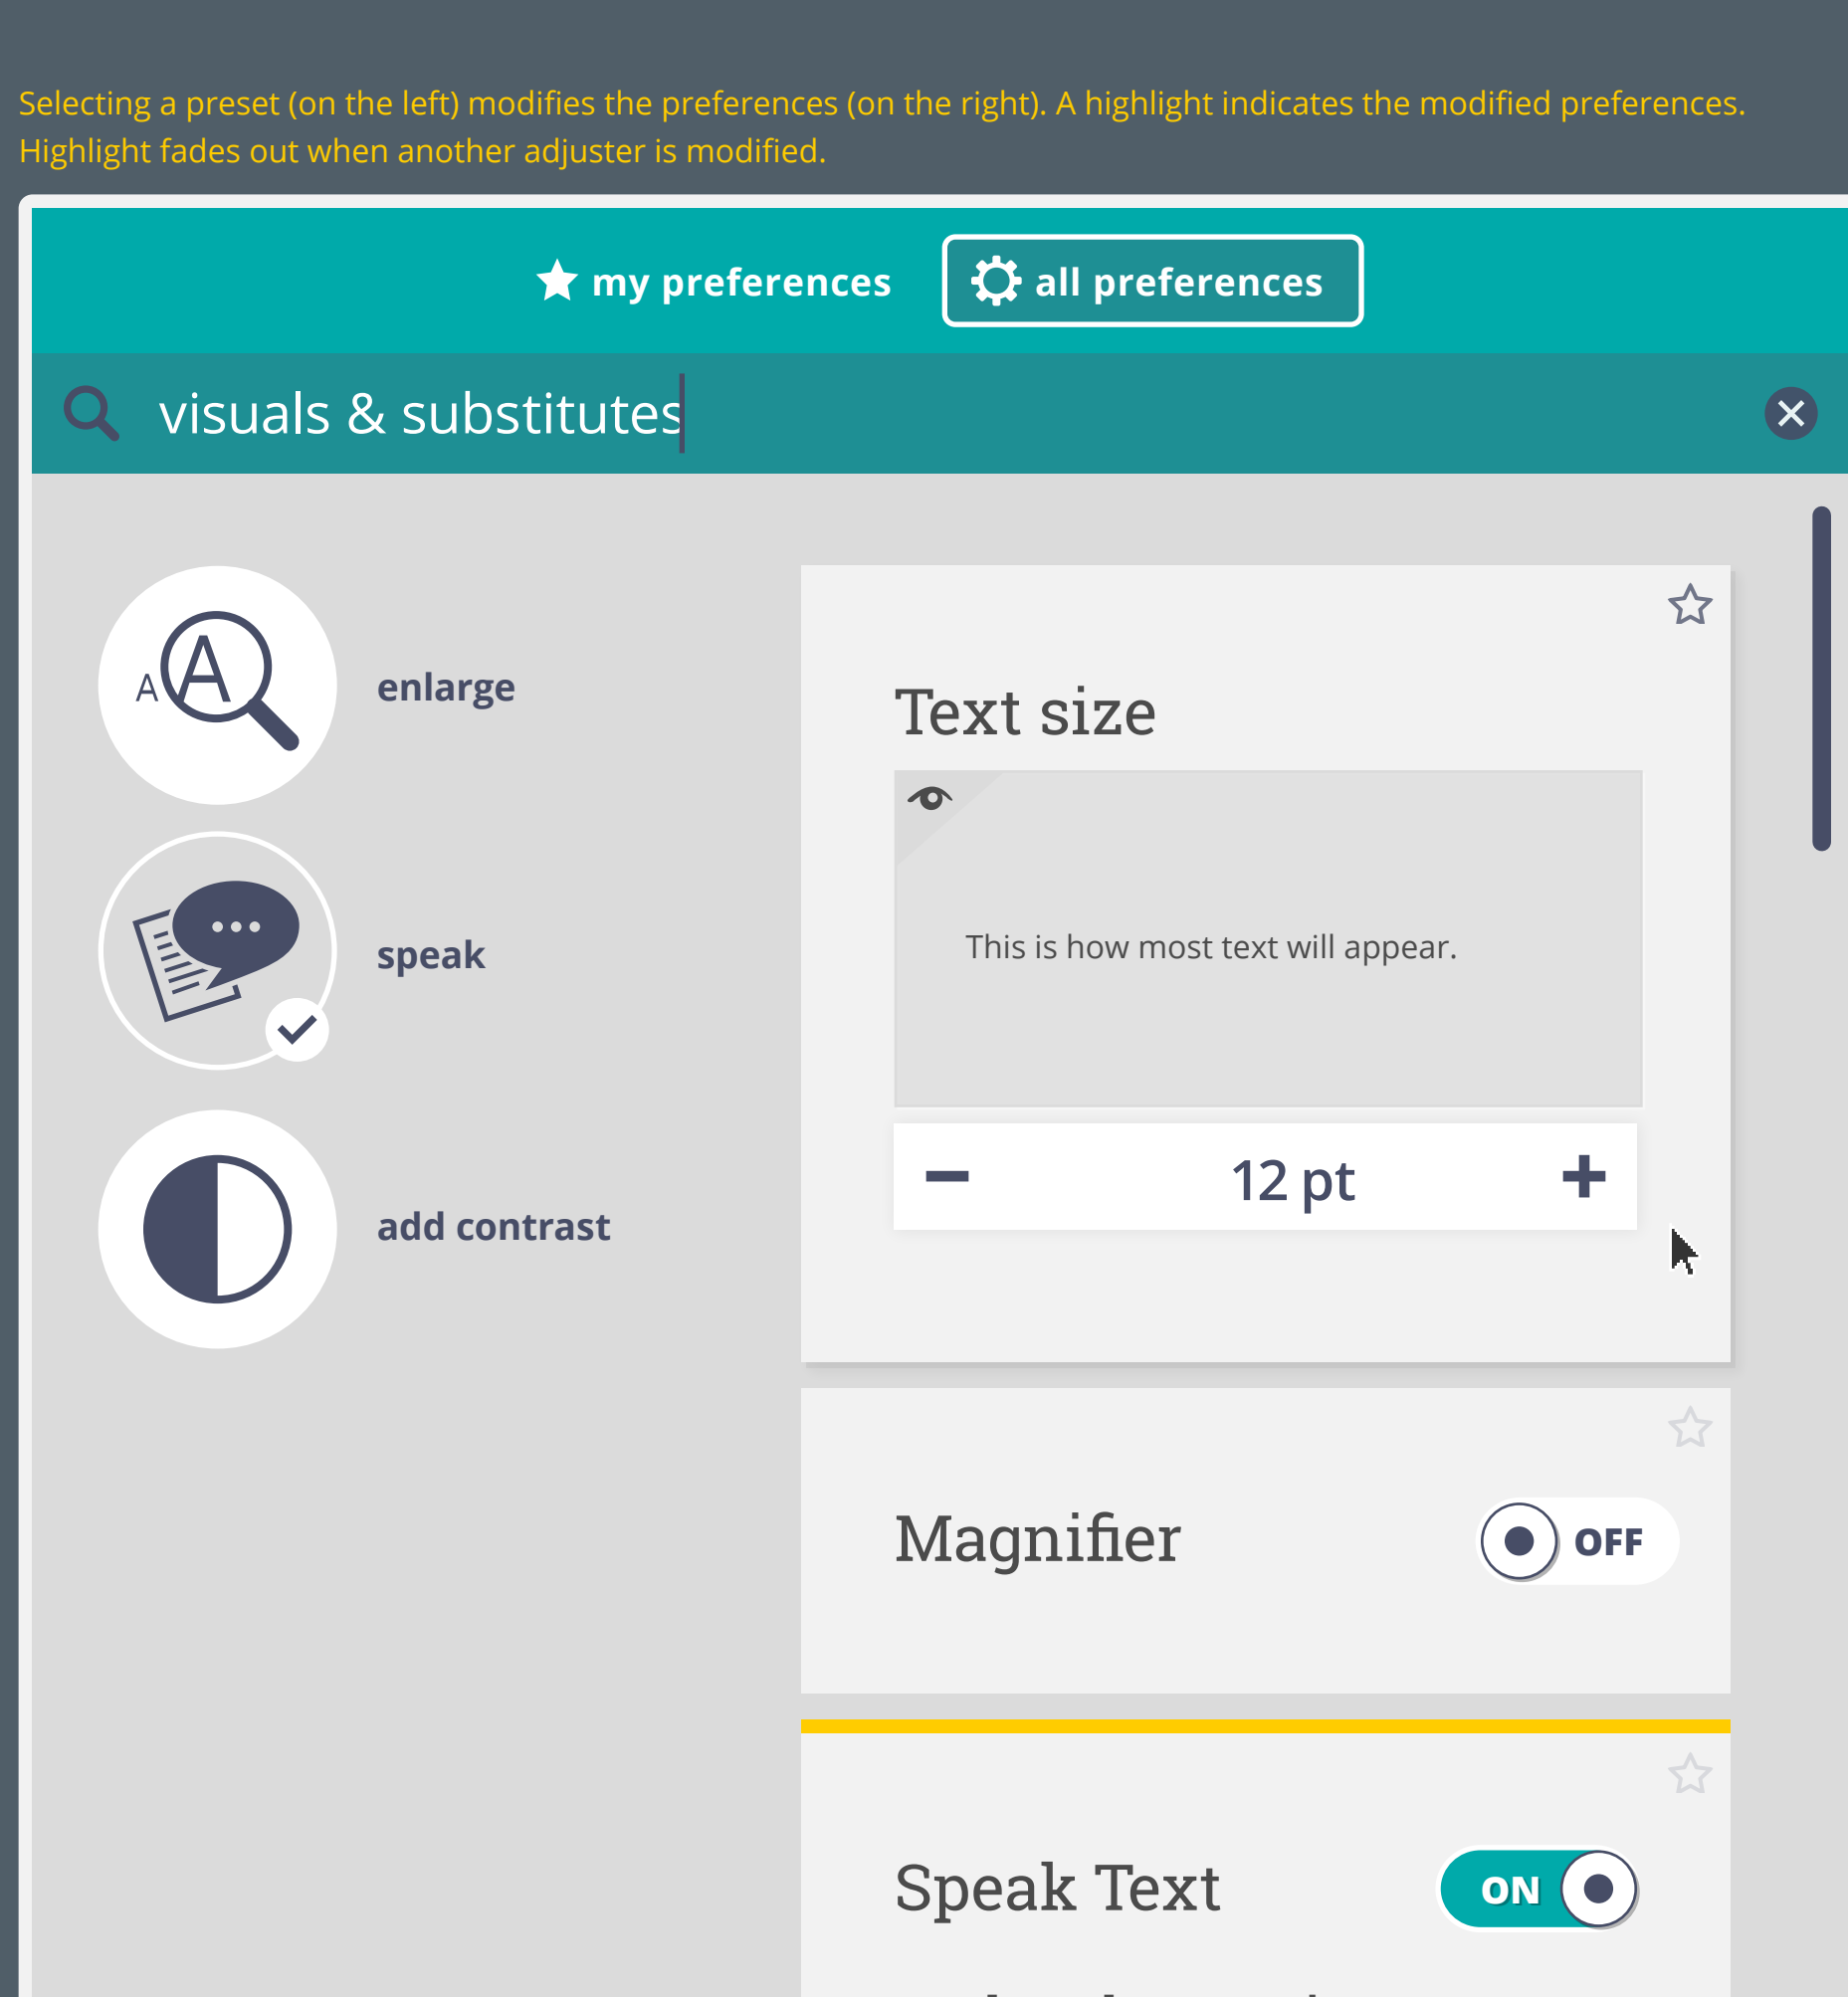

Responsive version of PMT, presets are moved to the top and no longer fixed

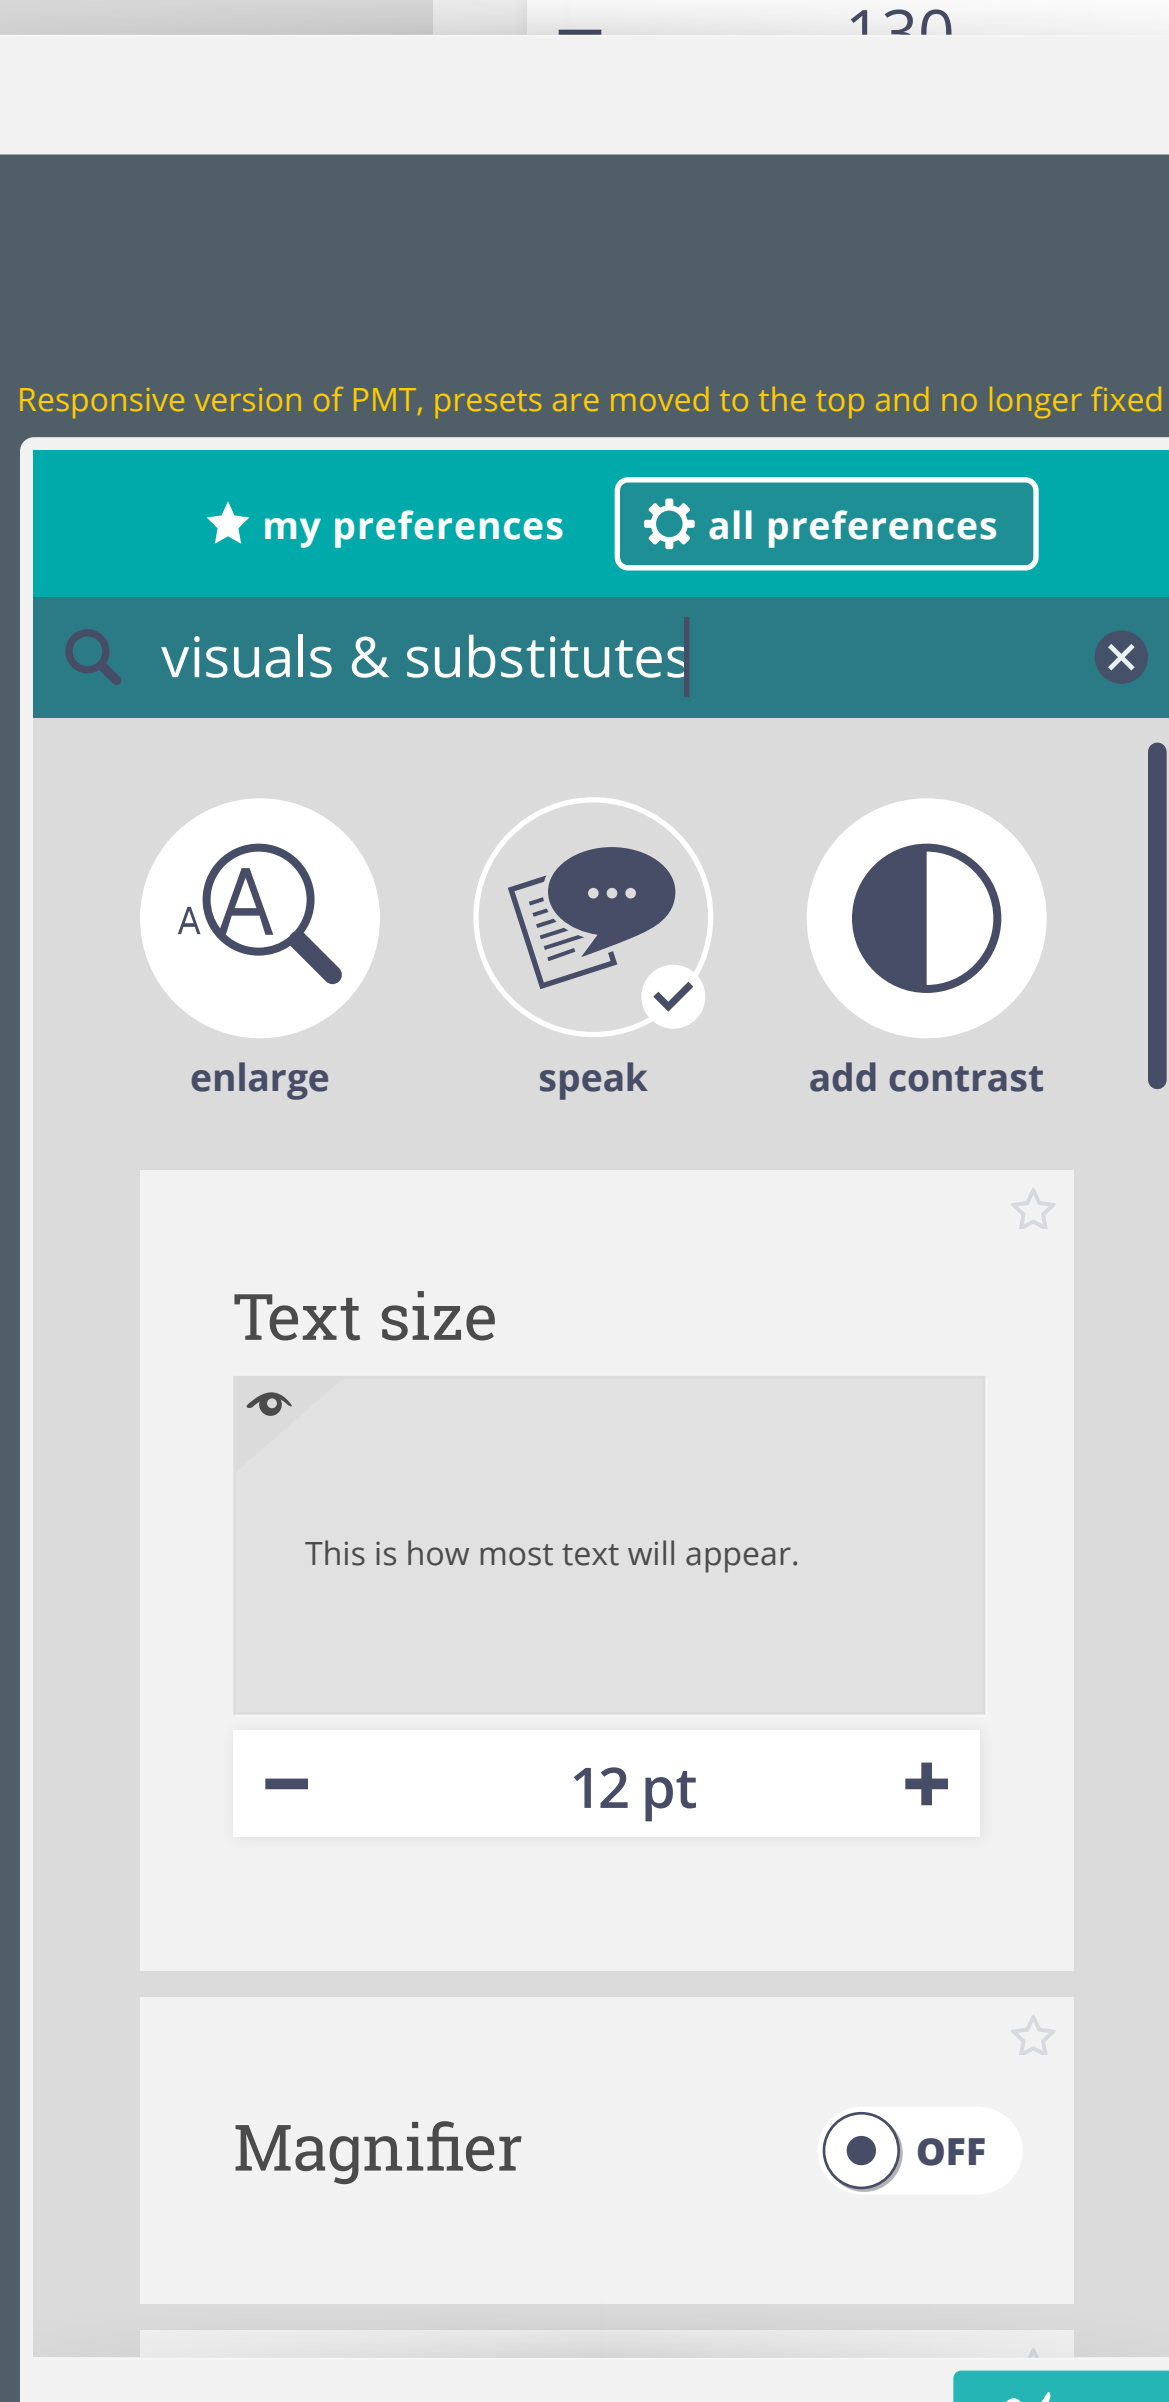

States of a preset

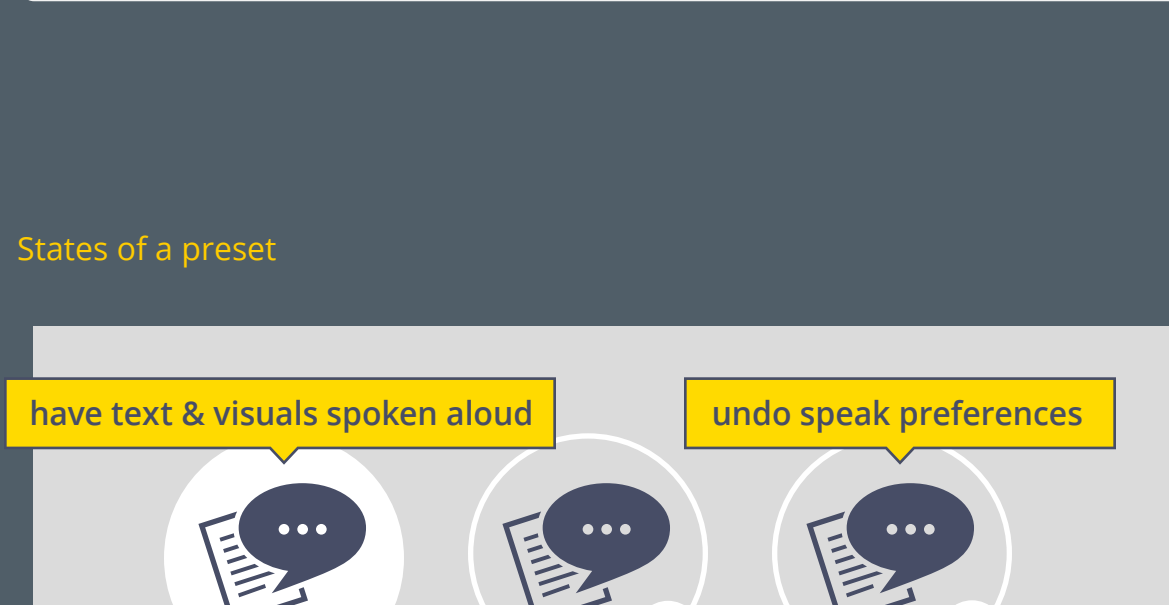


Start screen: primary preference adjusters

No tab between 'all preferences' and 'my preferences'


Some basic adjusters are populated by default - user can add and remove using the star

Presentation of primary adjusters in this screen is the same as PCP

To access more preferences user can either search (what they're looking for) or click on the gear (to find related preferences)

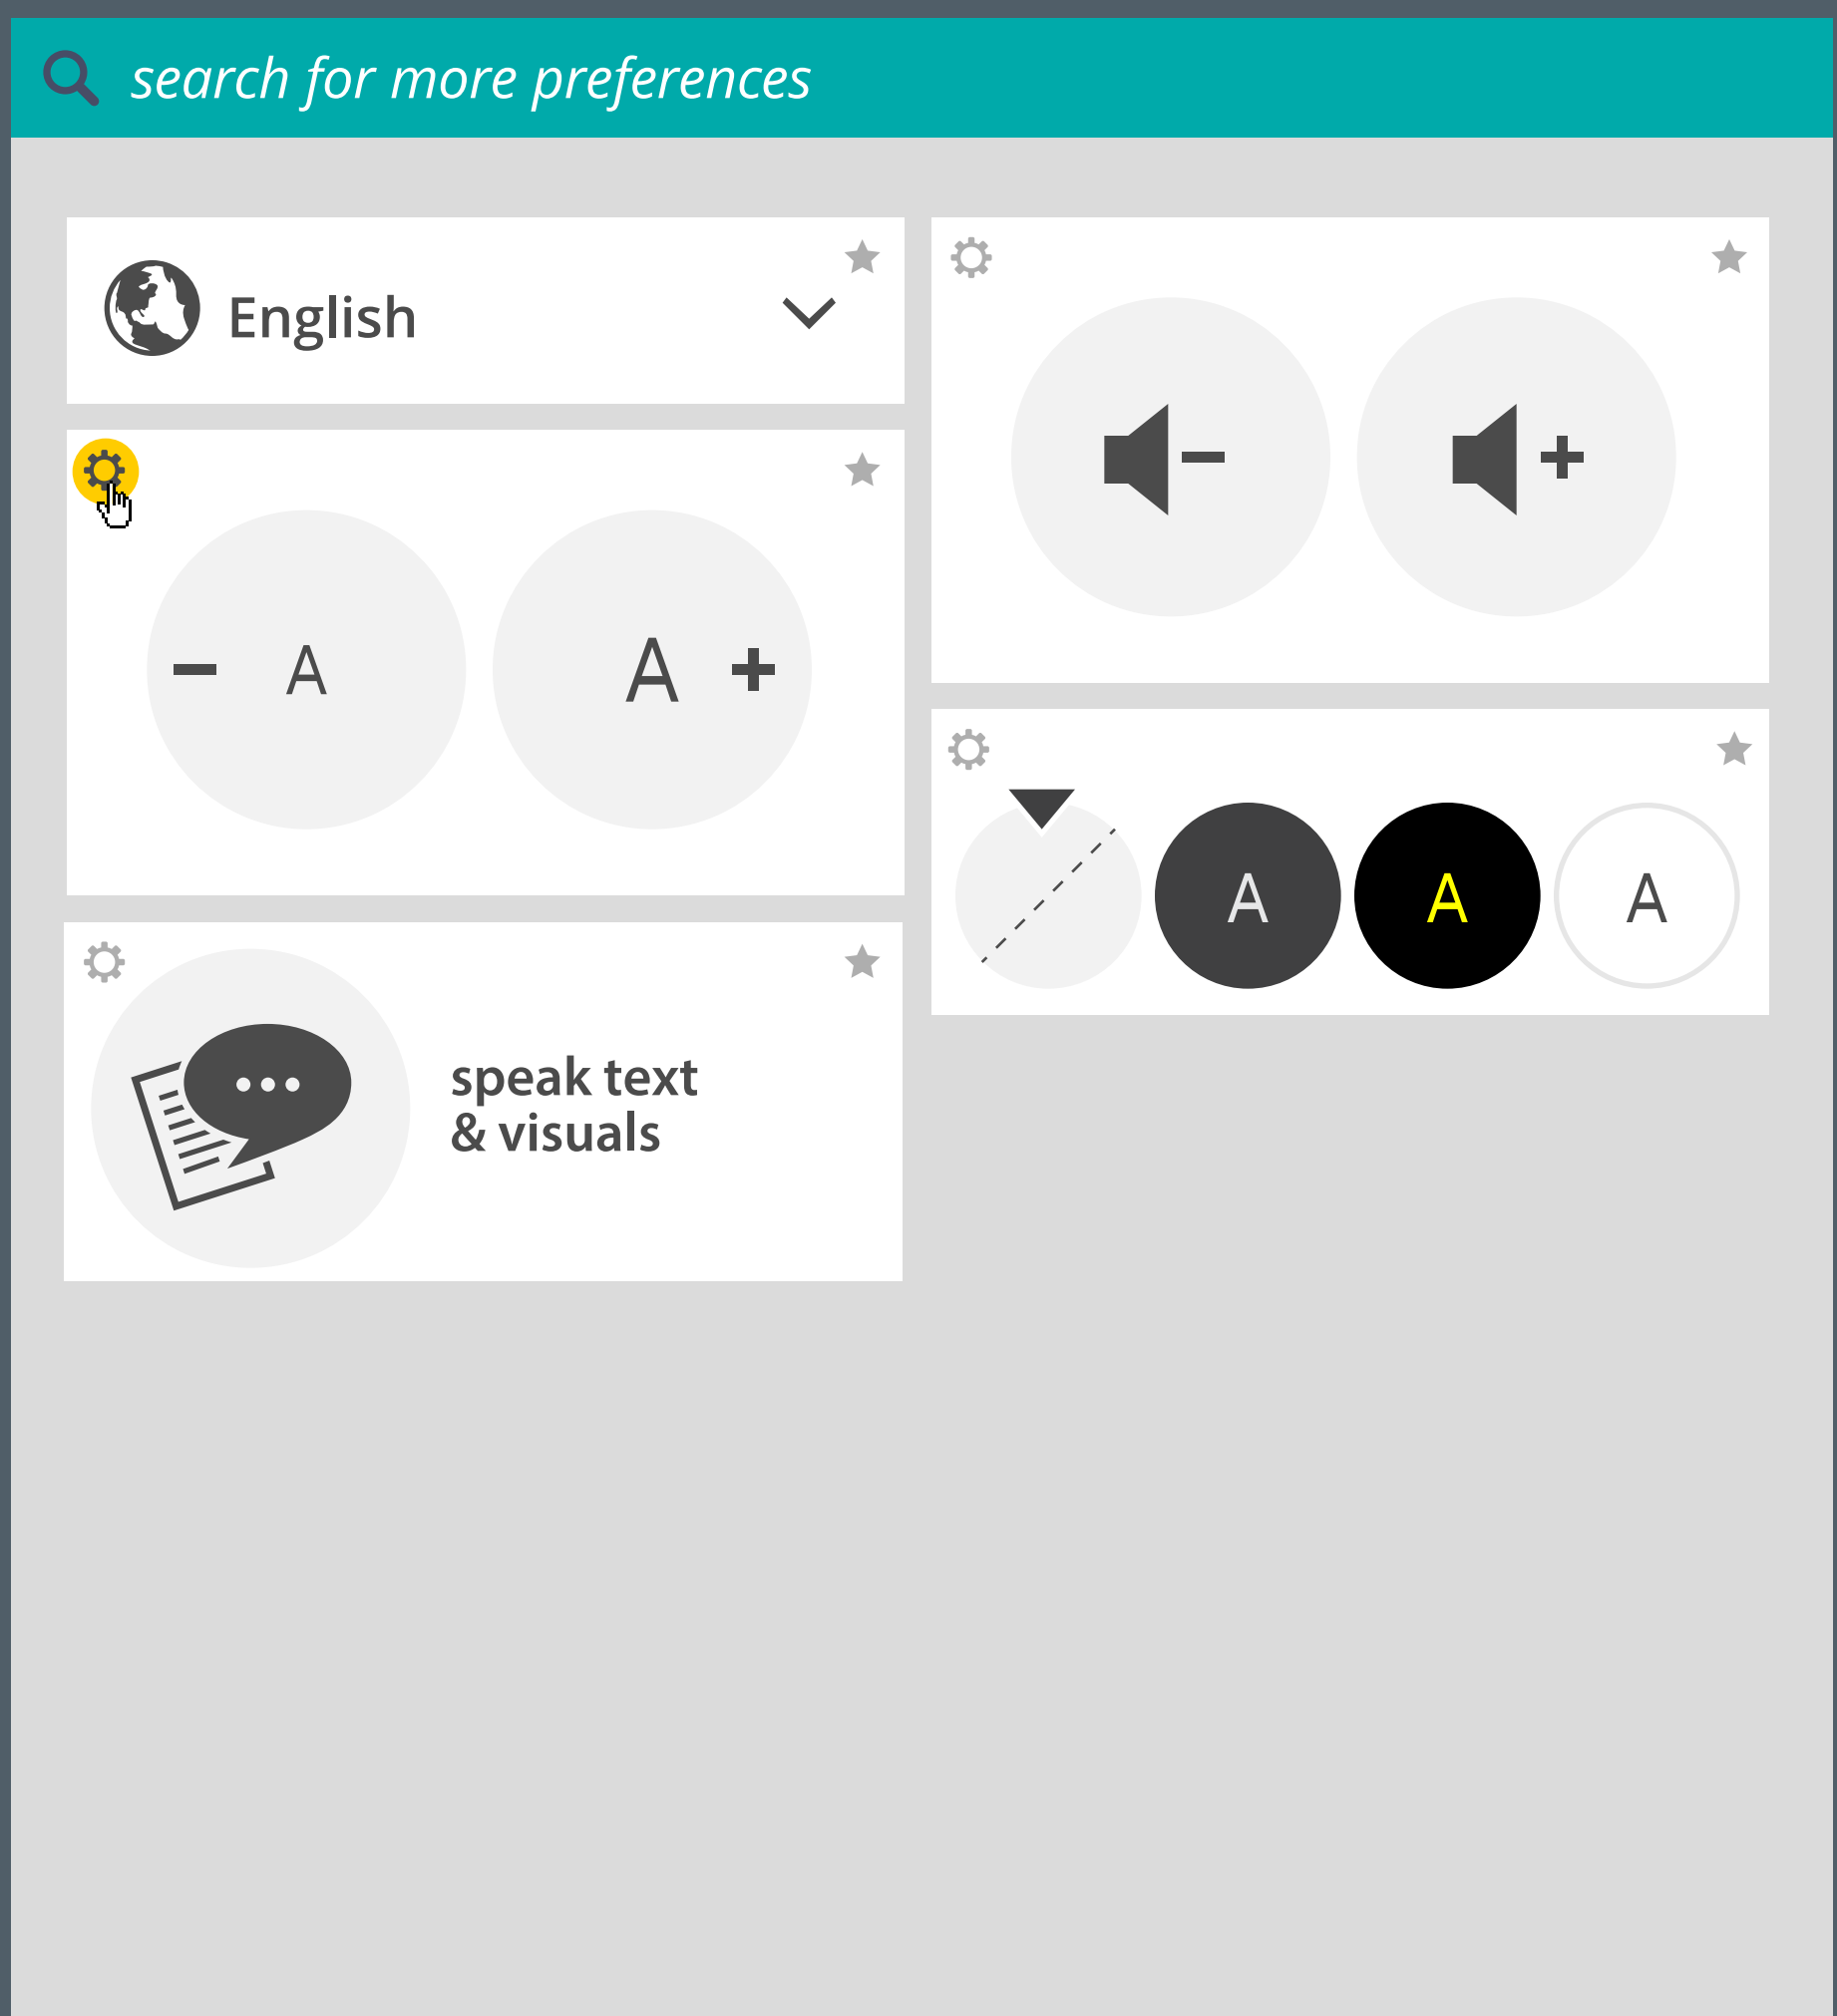


Activating search bar (either by clicking on it or by starting to type) opens a panel with suggestions and categories

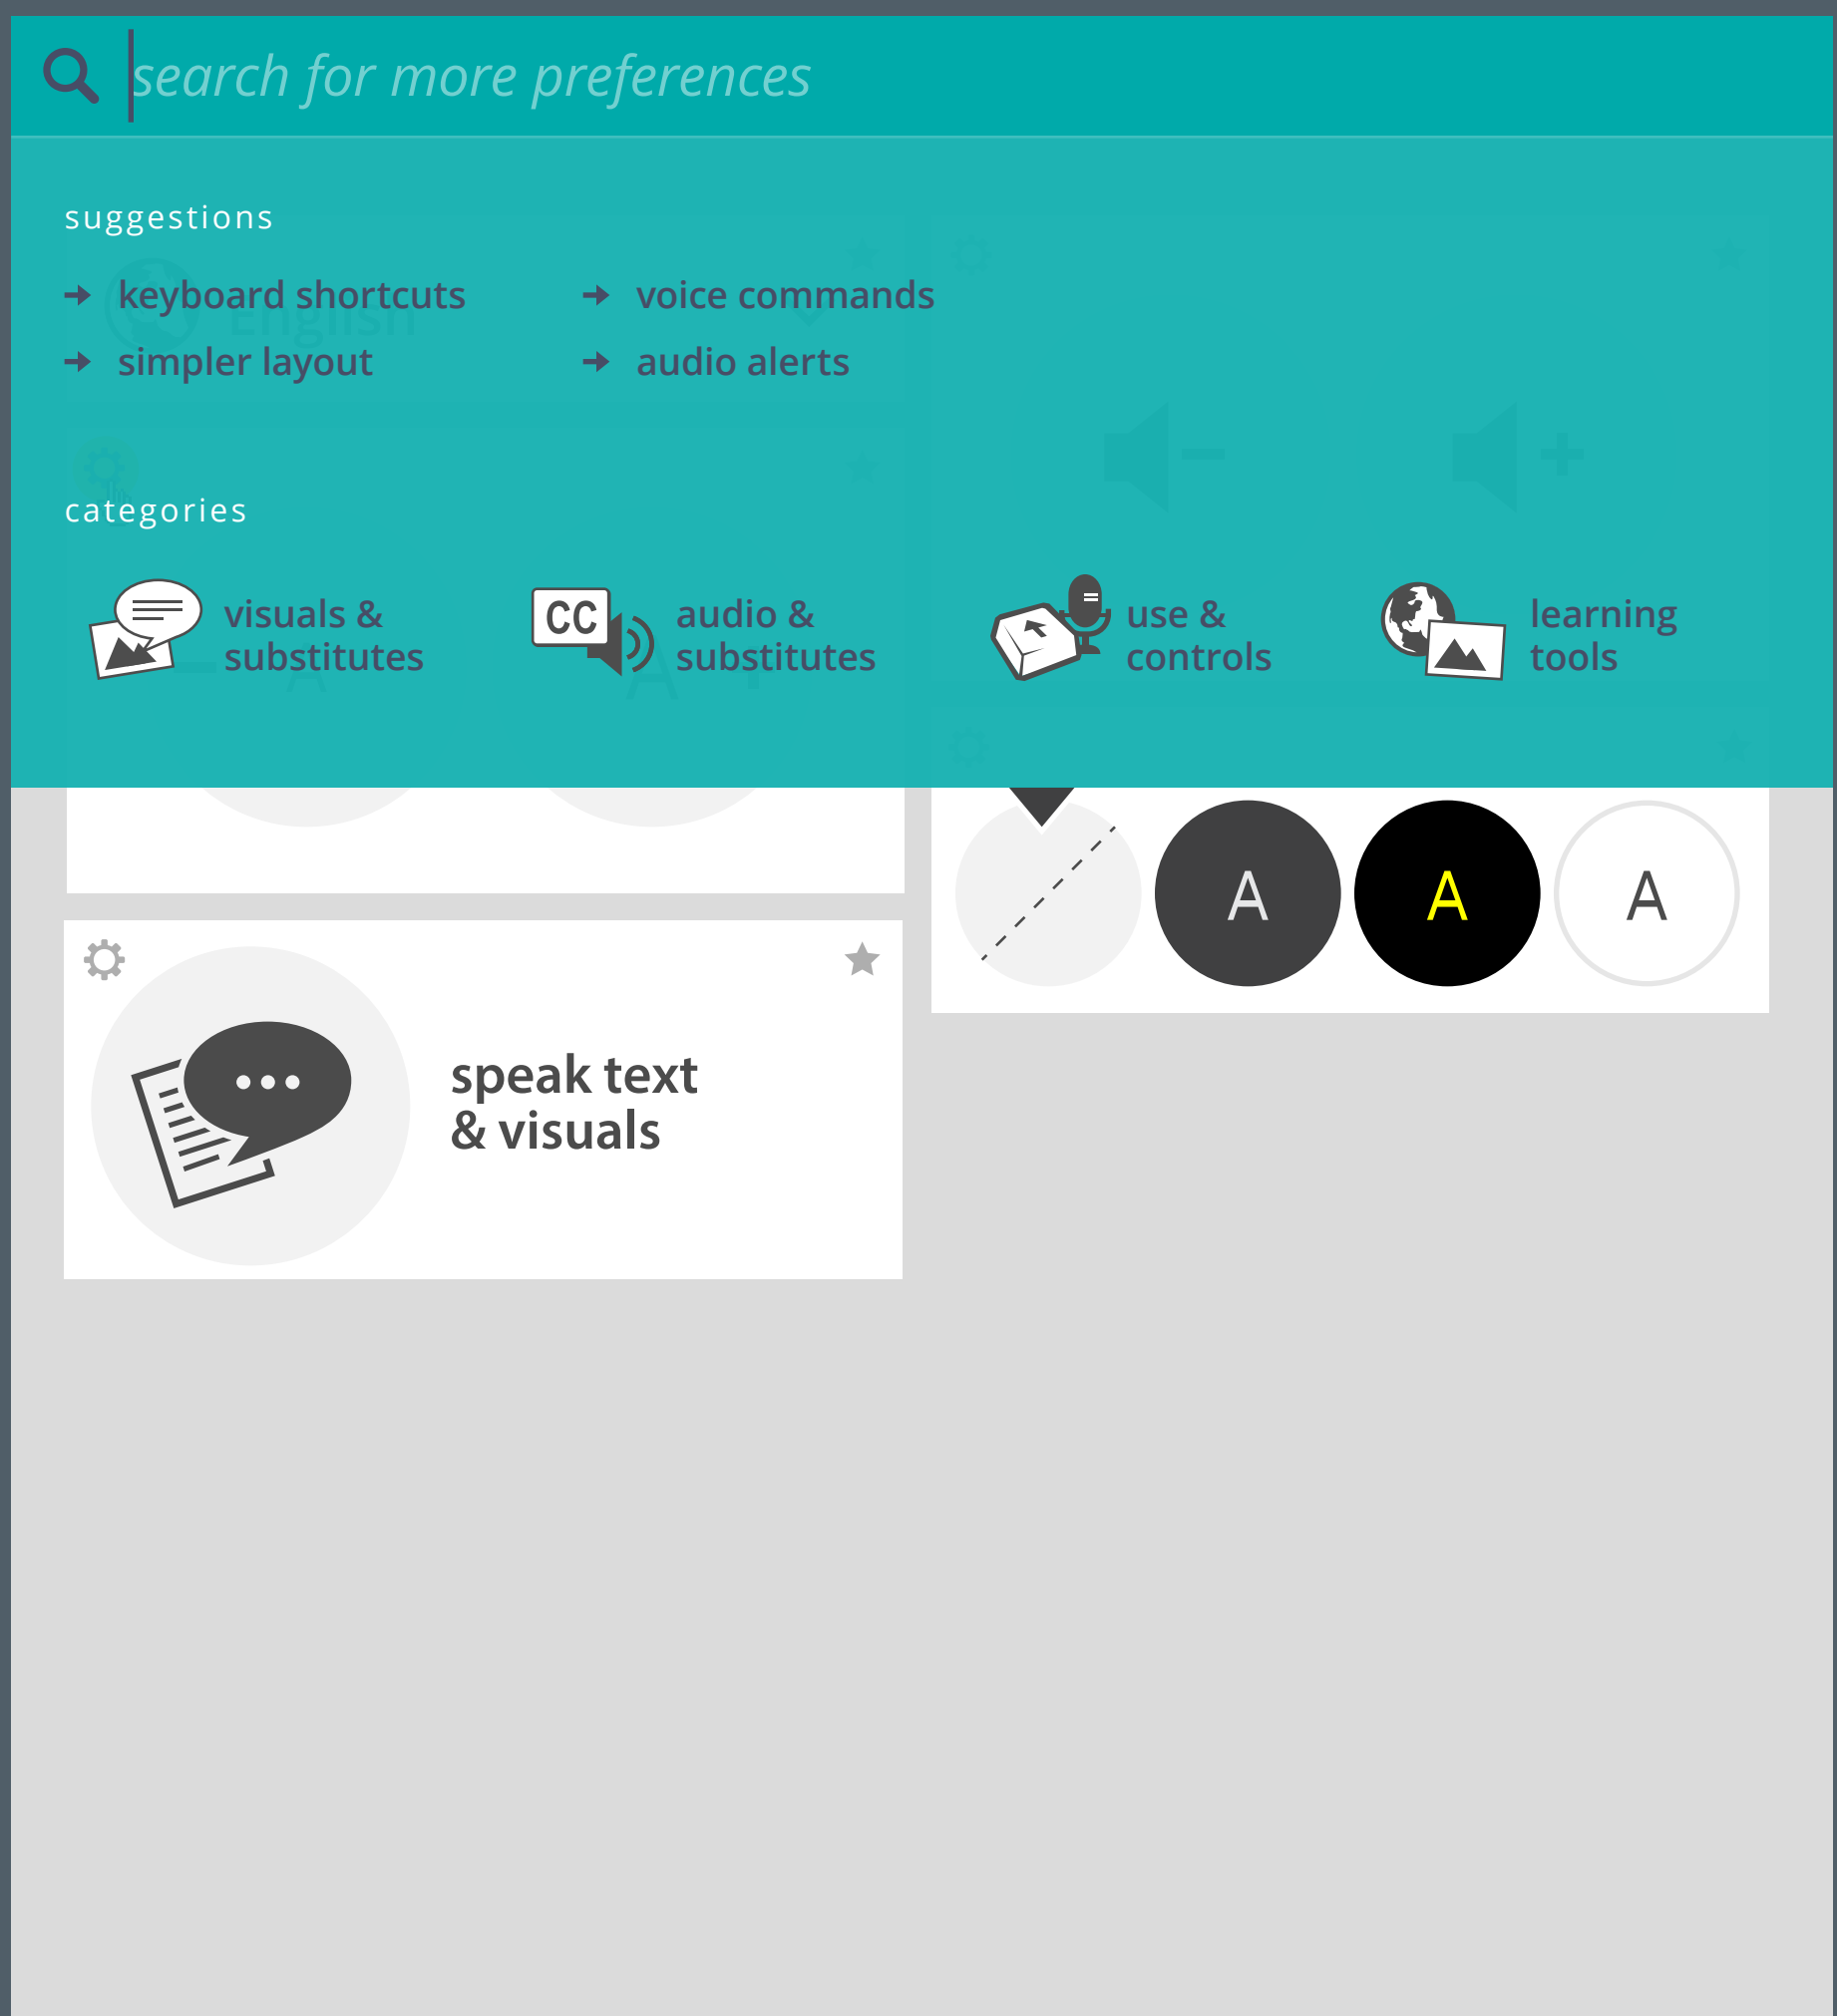

On searching or accessing the gear, user is brought to a list of preferences


'X' or 'back' button goes to previous screen

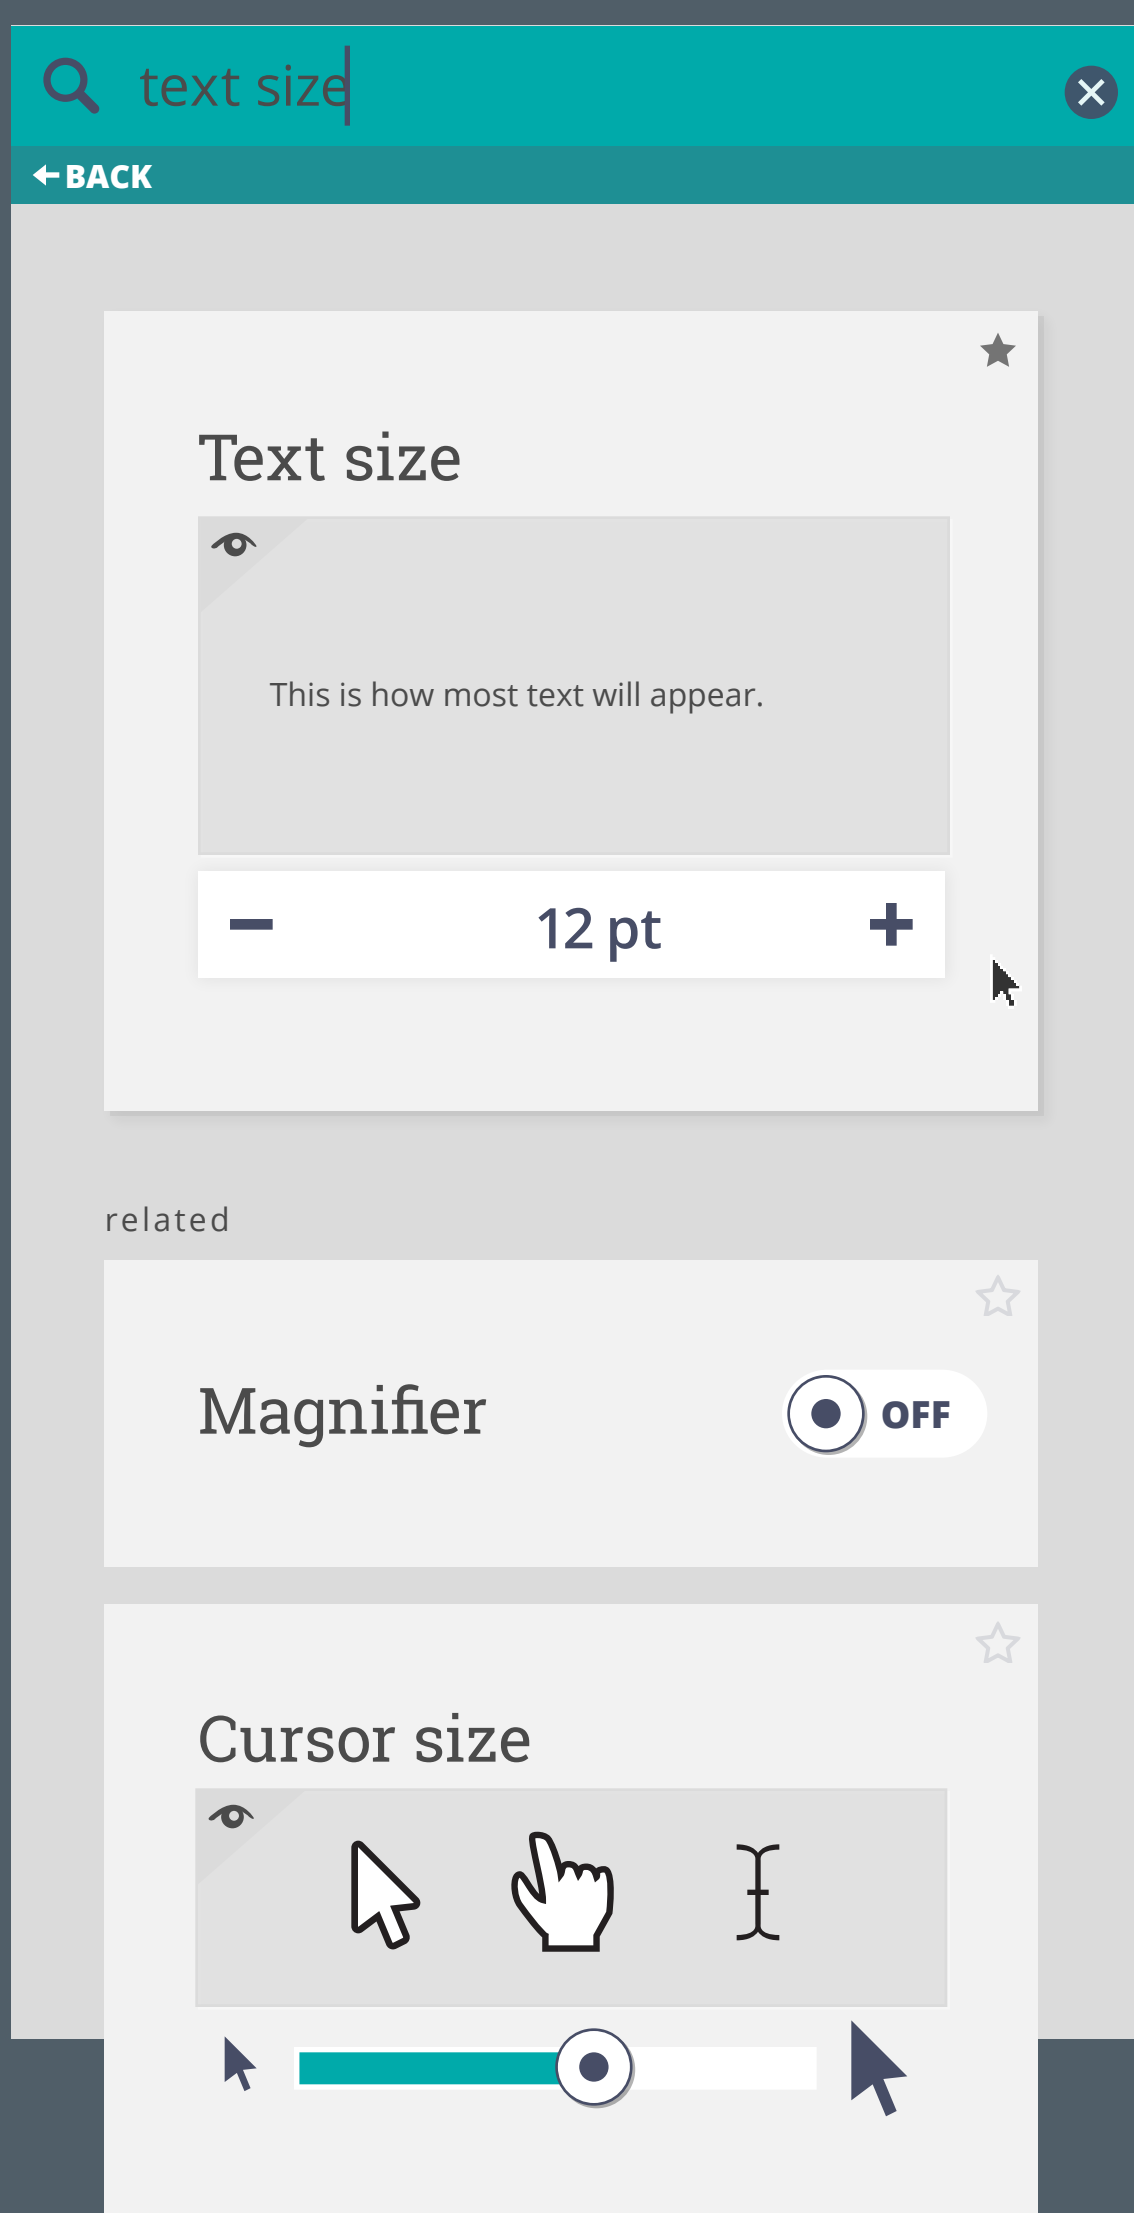


Sart screen: all presets

Single click presets, no tab between 'all preferences' and 'my preferences'

To access more granular preference adjusters, user can click on the gear or enter a search term.

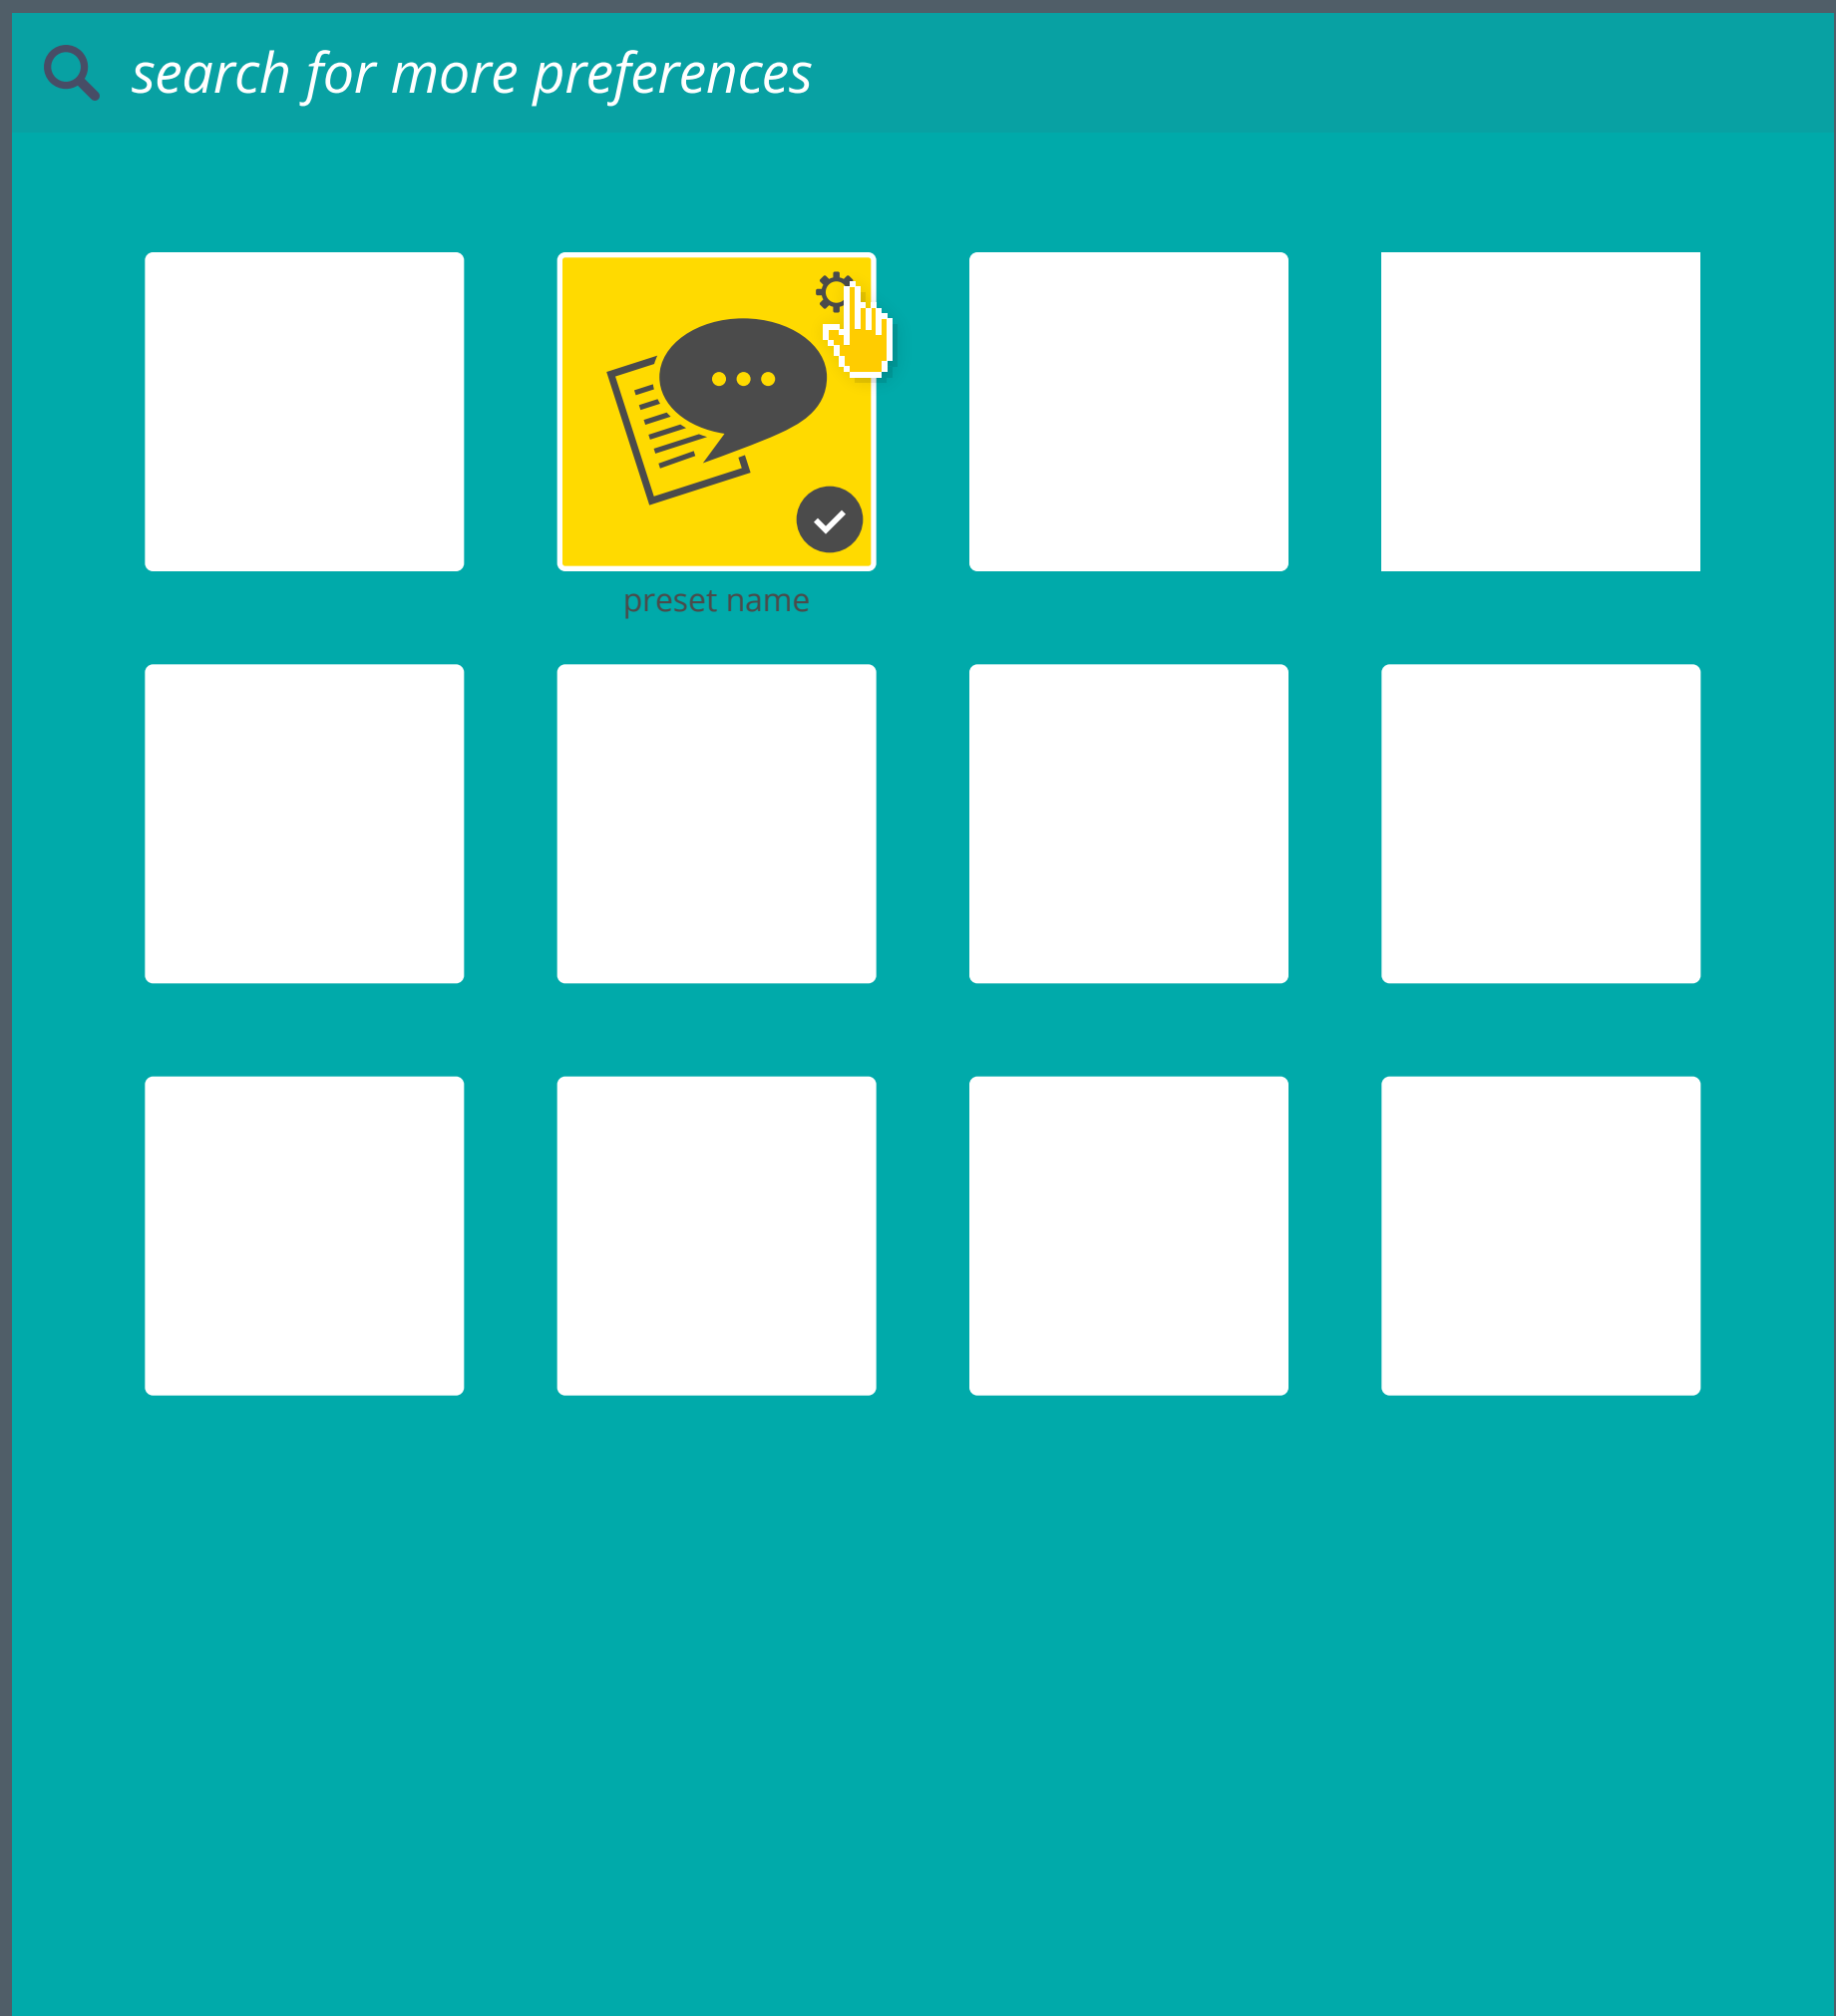

Using search or clicking on the gear takes user to a list of related presets (fixed left) and preferences (right)

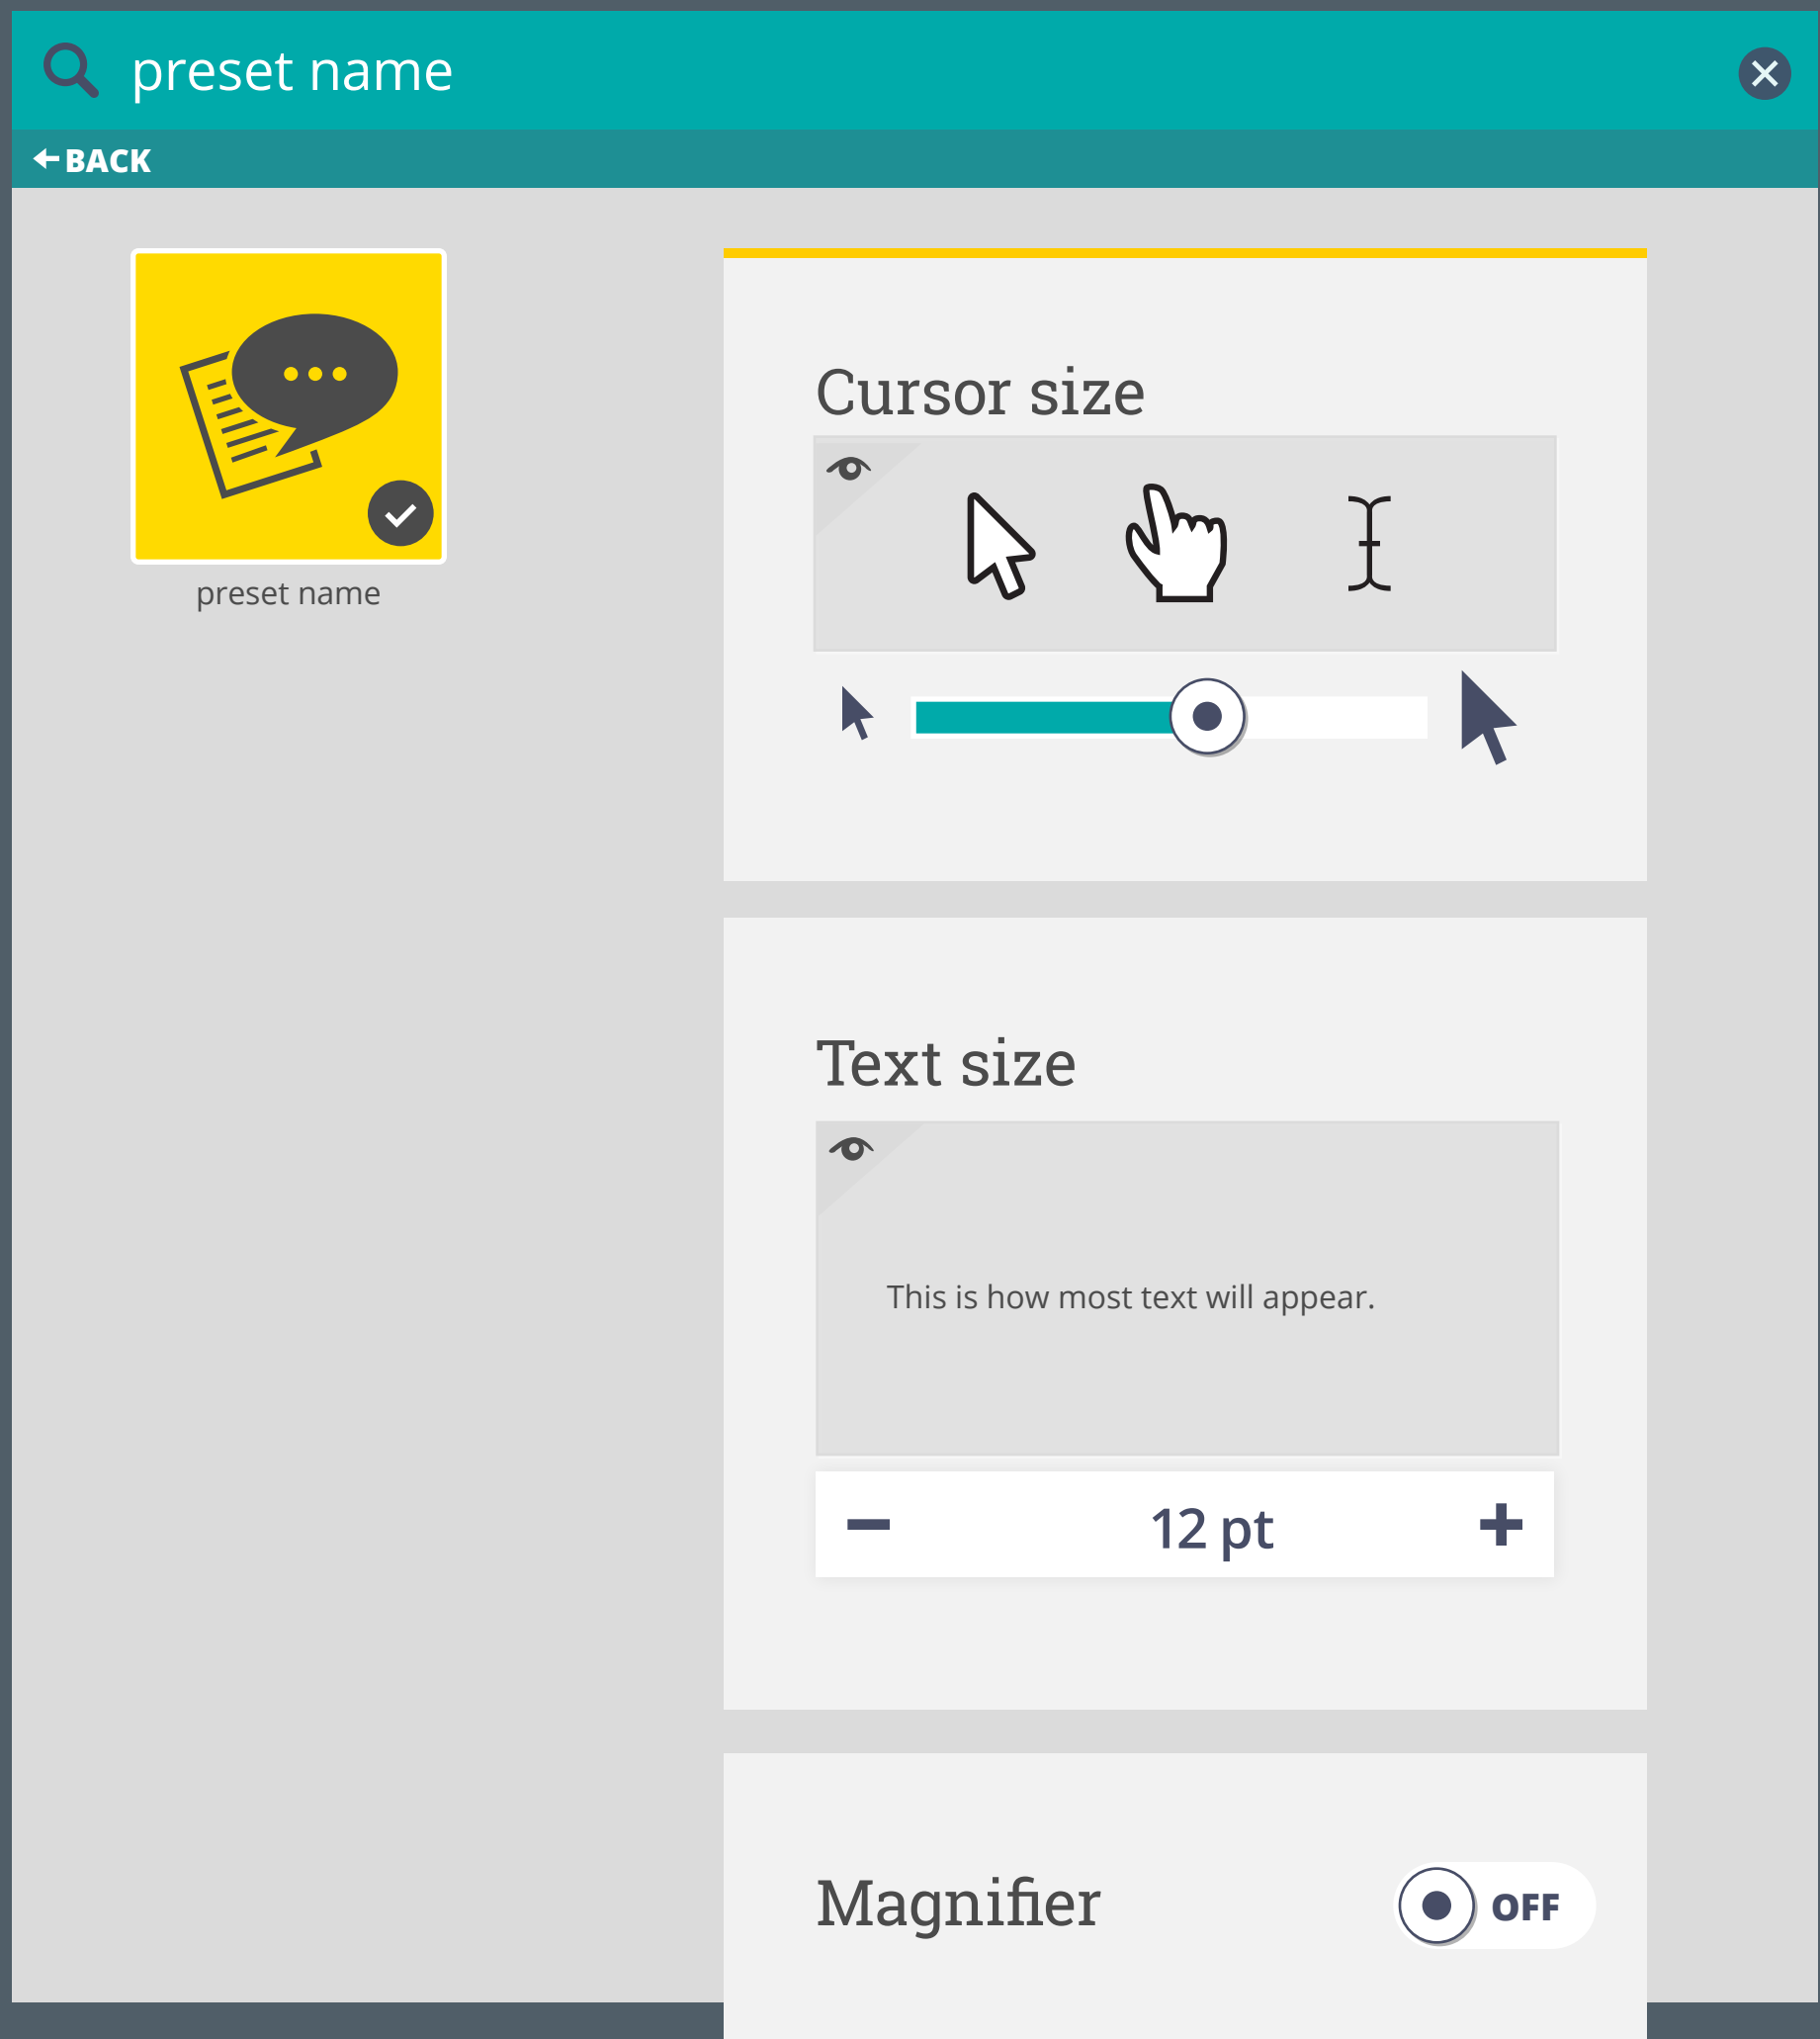

Auto-save alternative

The screenshot shows a mobile application interface for managing preferences. On the left is a dark blue sidebar with a '+' icon at the top. It lists three preference sets: 'Base Set' (any devices, anytime), 'Night-time' (all devices during 20:00-06:00, highlighted in yellow with 'apply' and 'edit' buttons), and 'Office' (all devices at 330 Main Street, with a checkmark and 'applied to device'). The top right of the main area has two buttons: 'my preferences' (with a star) and 'all preferences' (with a gear). The main content area shows two preference cards. The first is 'Text size' with a star icon, an eye icon, a preview box showing 'This is how most text will appear.', and a control bar with a yellow diamond, a minus sign, '24 pt', and a plus sign. The second card is 'Magnifier' with a star icon and a toggle switch labeled 'OFF'. At the bottom left are 'sets' and 'account' icons. At the bottom right is the text 'Text size edit saved'.

saving is automatic

when user encounters the device the changes have been made to they receive a message:

if no response is provided, auto applies with option to undo/revert

The **Night-time set** used on this device has been changed.

applying in 75 seconds

use previous

apply changes

Preference changes have been applied.

undo

Sign-up

Choose **at least one method** to access your account. This can be changed later.

LOGIN RFID USB QR CODE

*** Recommended for security**

Enter email or create username

Password

Confirm password

I accept [terms & conditions](#)

cancel

create account

Sign-up

Choose **at least one method** to access your account. This can be changed later.

LOGIN RFID USB QR CODE

*** Recommended for security**

Enter email or create username *Available* ✓

Password *Strong* ✓

Confirm password *Passwords do not match* !

I accept [terms & conditions](#)

cancel

create account

Sign-up

Choose **at least one method** to access your account. This can be changed later.

Select recovery method

Recovery ID

The following ID has been copied to your clipboard. Please save it for account recovery in case of lost password or token.

back

got it

I accept [terms & conditions](#)

cancel

create account

Sign-up

Choose **at least one method** to access your account. This can be changed later.

Select recovery method

Recovery ID

The following ID has been copied to your clipboard. Please save it for account recovery in case of lost password or token.

back

got it

I accept [terms & conditions](#)

cancel

create account

LOGIN RFID **USB** QR CODE

none detected

Insert a USB memory stick to create a token that allows you to apply preference with the USB.

LOGIN RFID **USB** QR CODE

Kingston (inserted) add +

Untitled (inserted) add +

LOGIN RFID **USB** QR CODE

Kingston **active** (inserted)

Untitled (inserted) add +

LOGIN RFID **USB** QR CODE

Kingston **active** (inserted) delete x

Untitled (inserted) add +


LOGIN RFID **USB** QR CODE

Generate QR Code

A QR Code is a barcode that you can scan to quickly apply your preferences on some devices.

LOGIN RFID **USB** QR CODE





Generate QR Code



print

email

get new ↻

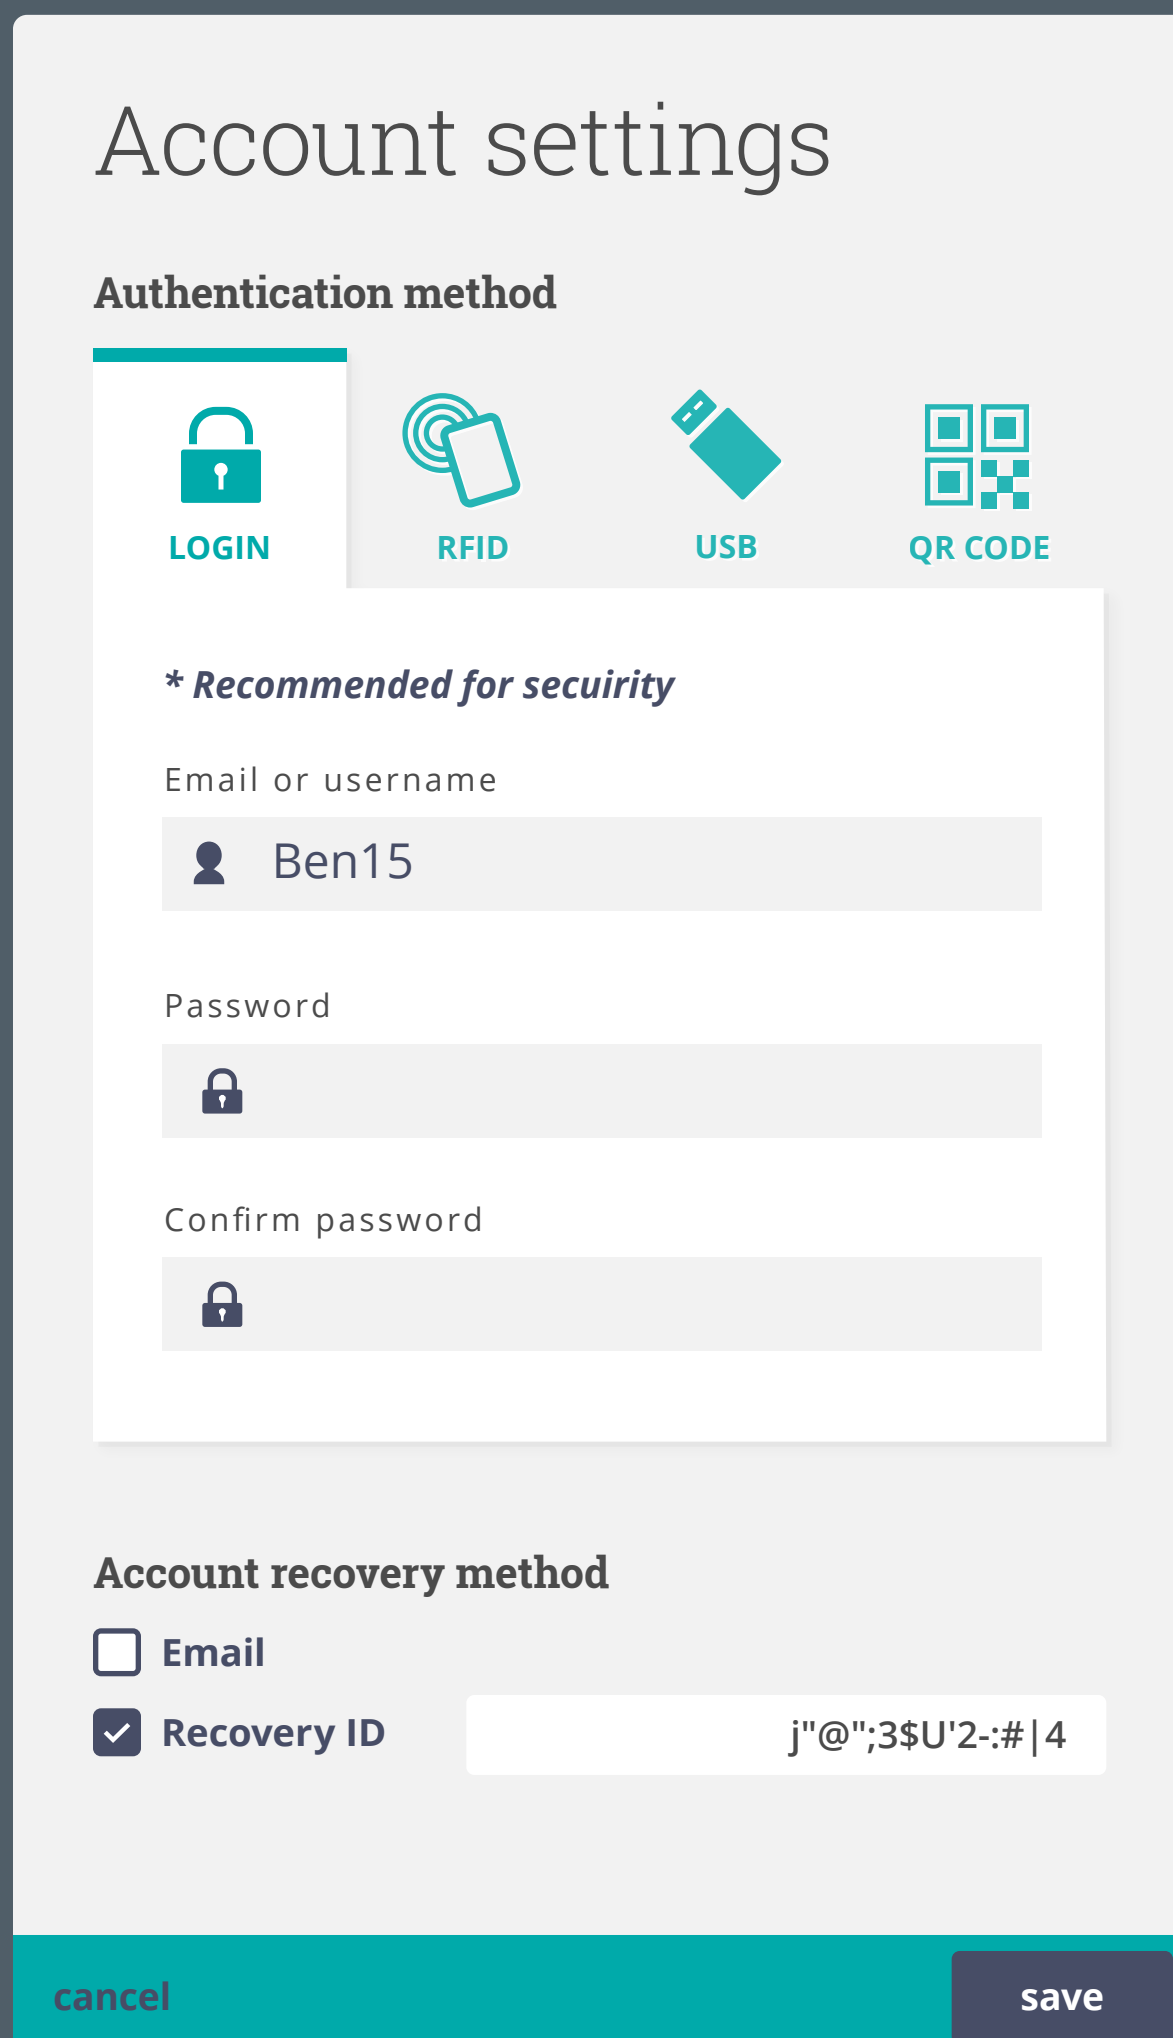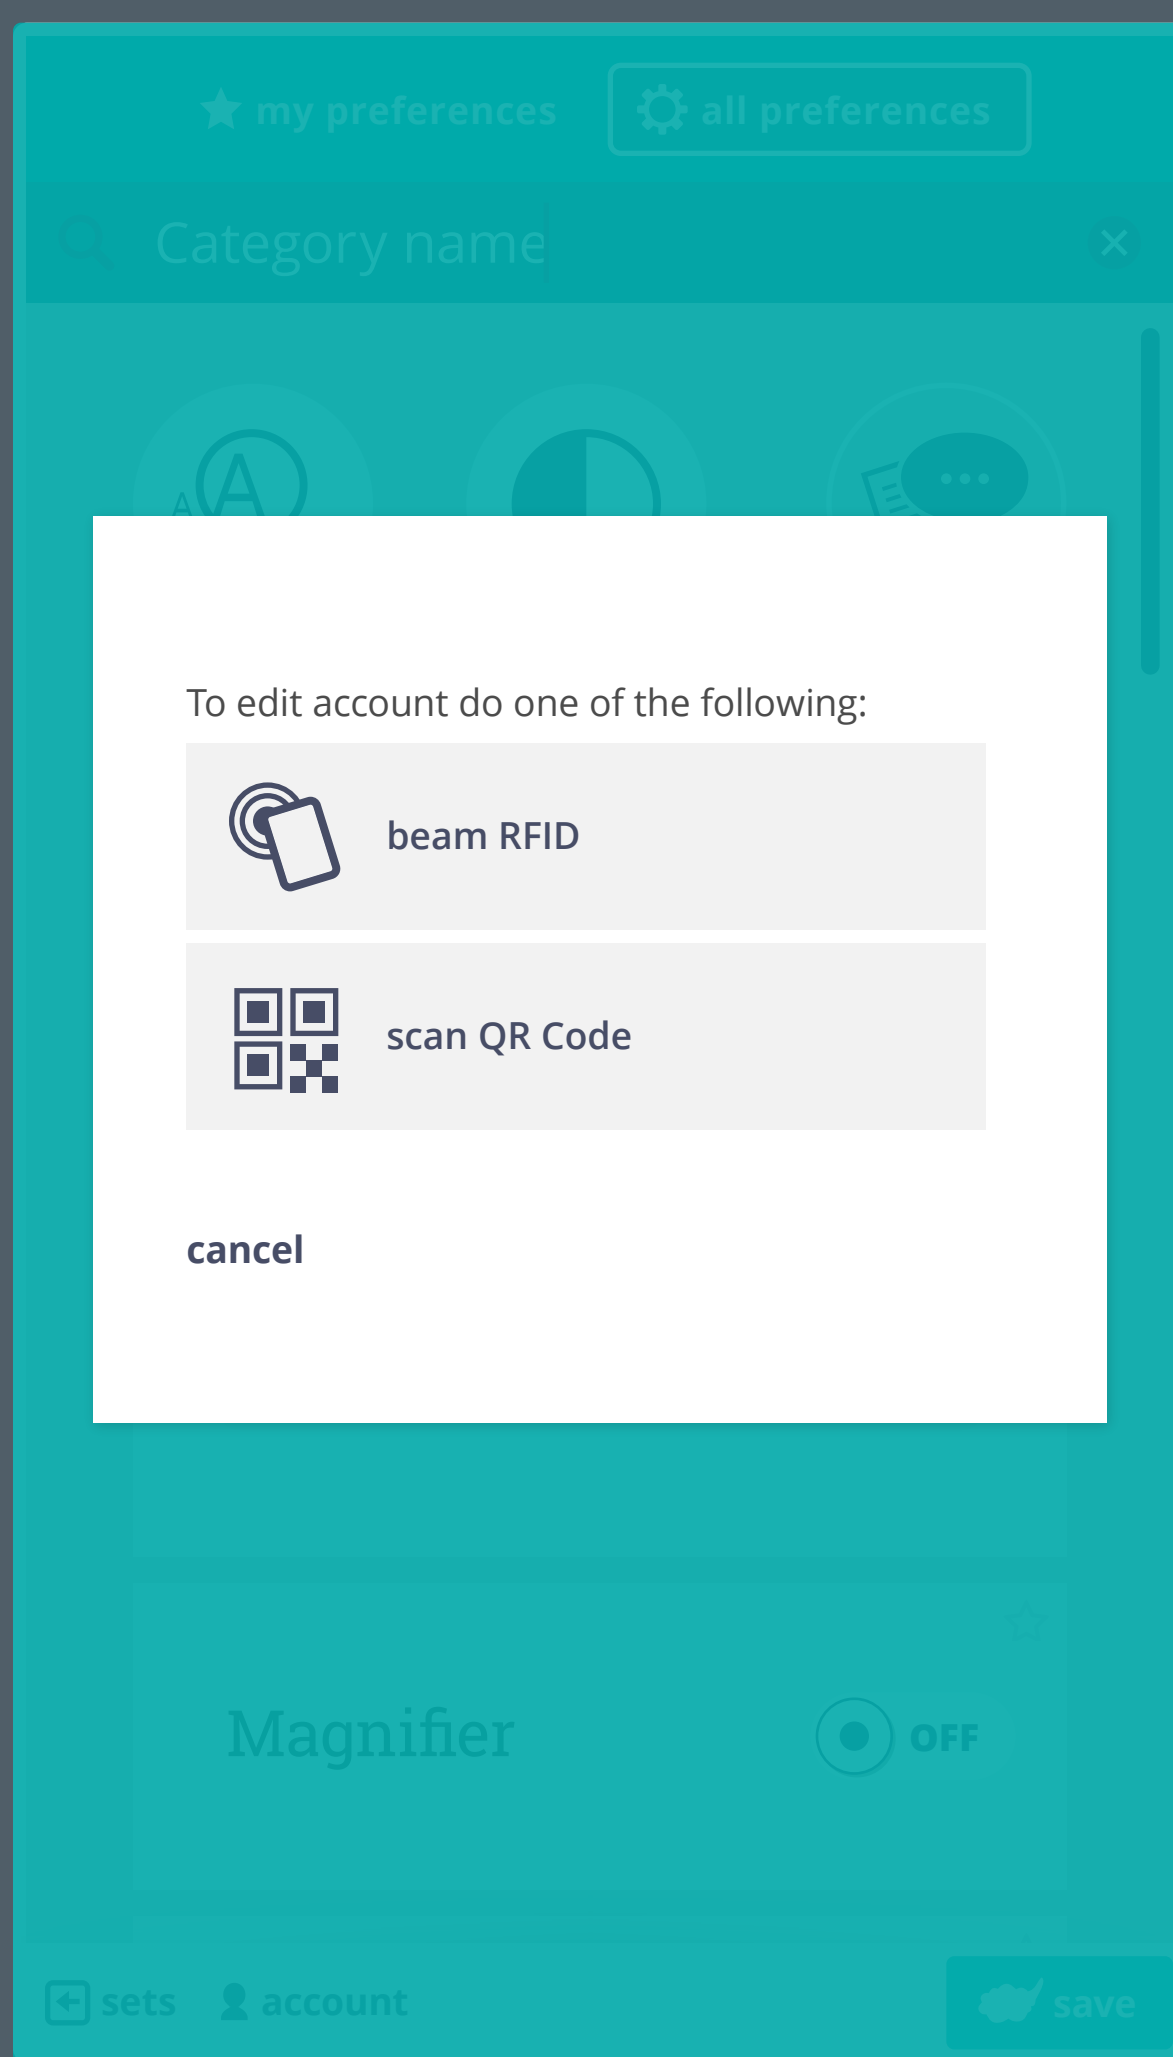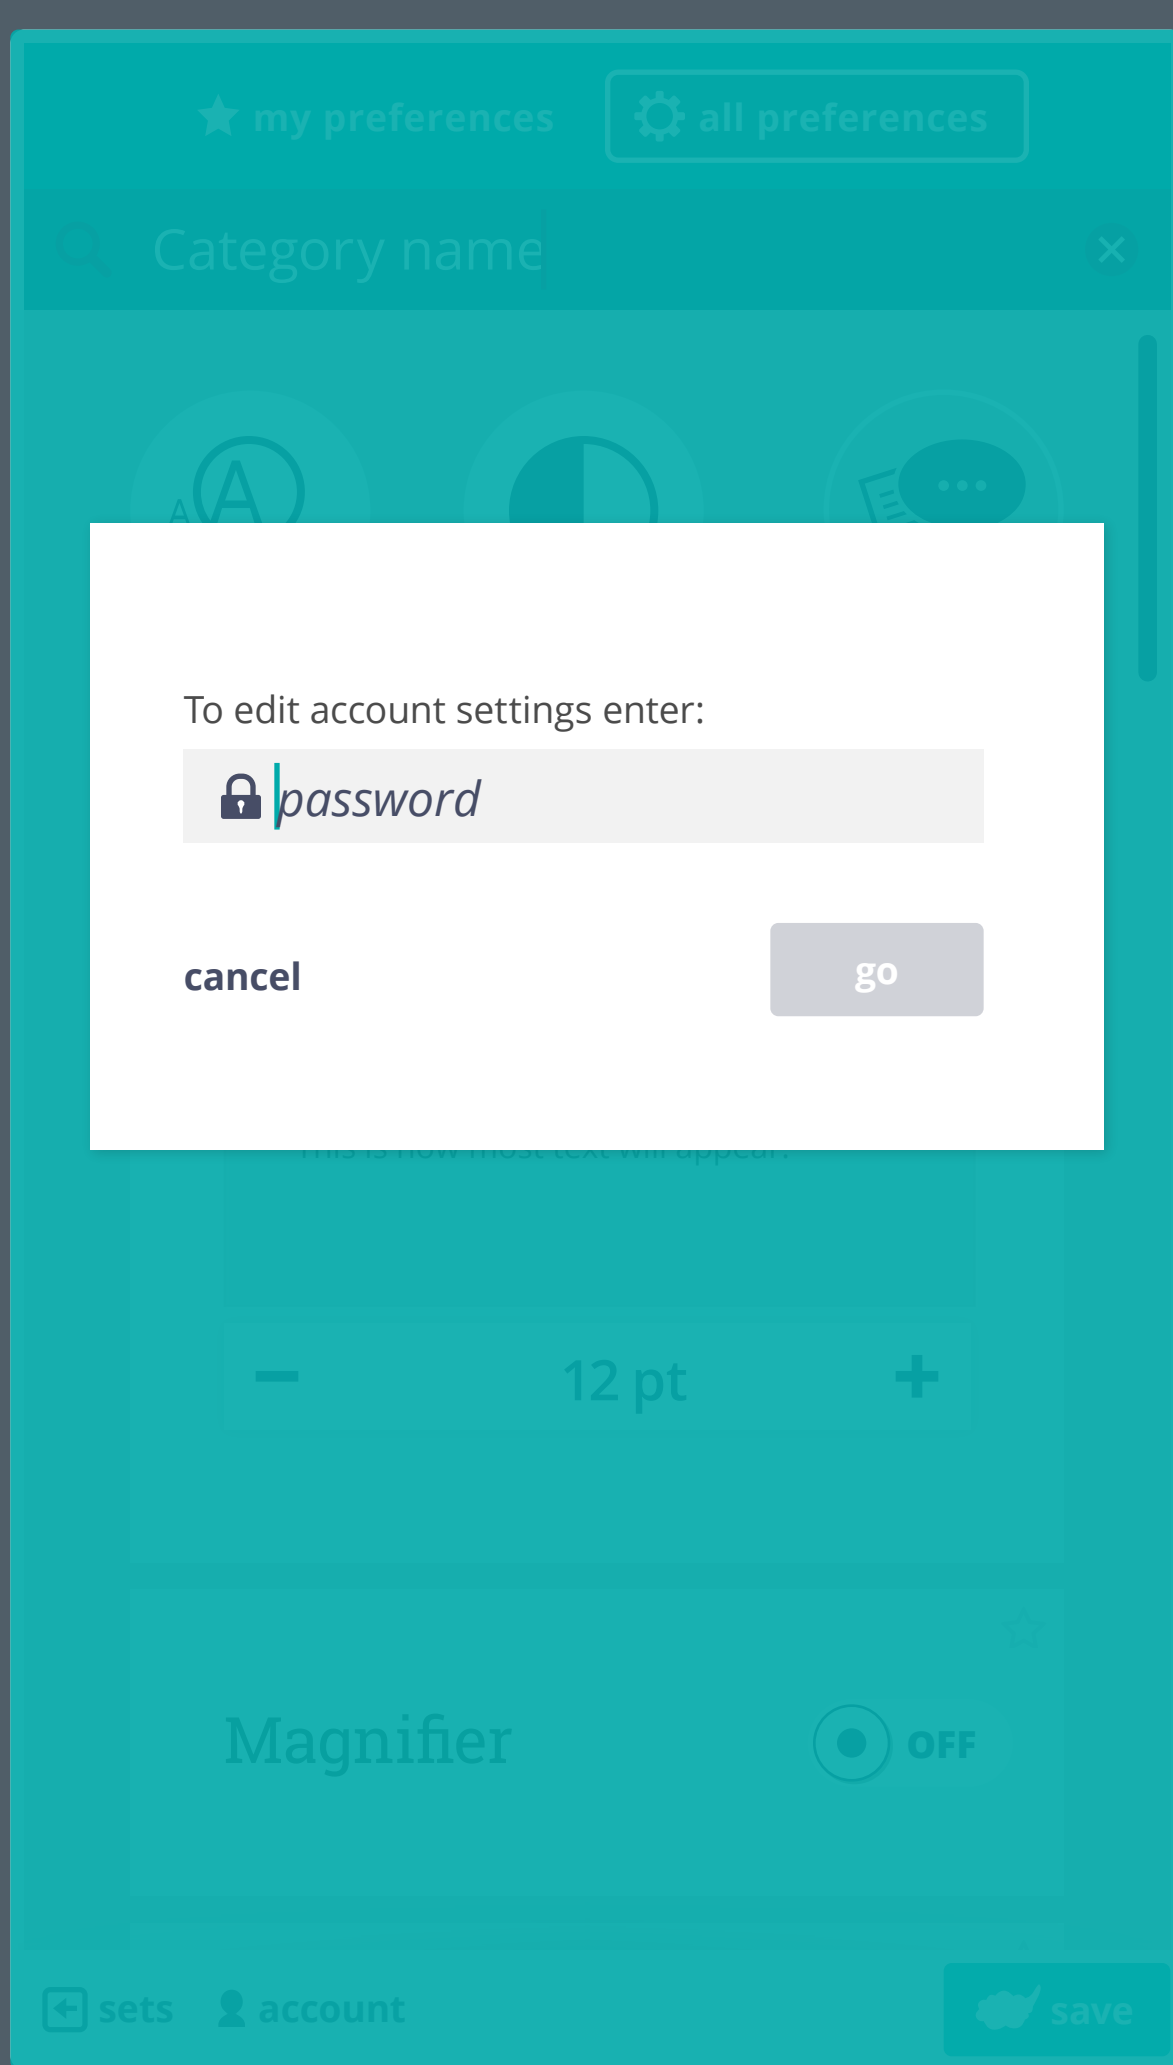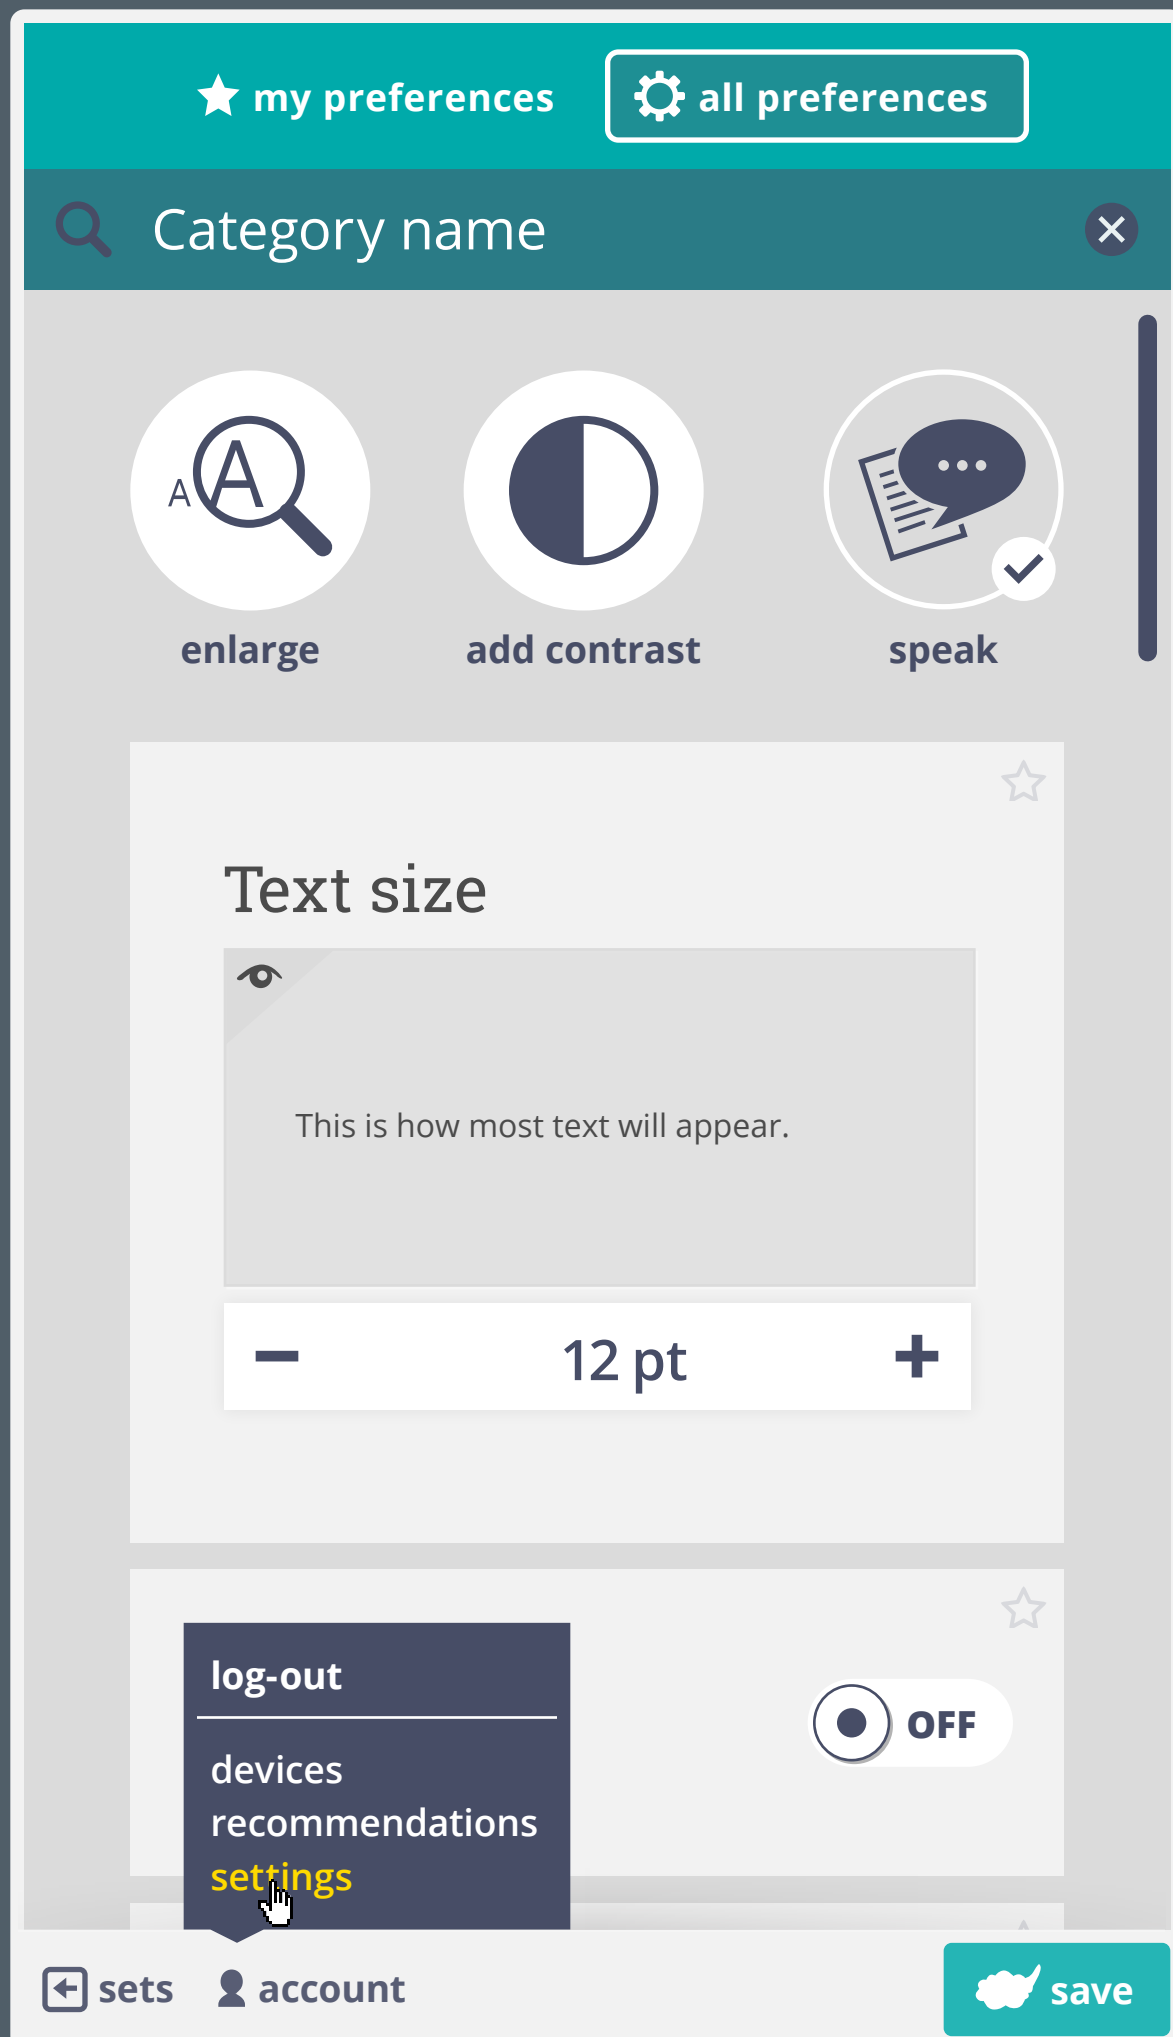

★ my preferences ⚙ all preferences

🔍 Category name ×

enlarge
 add contrast
 speak

Text size

This is how most text will appear.

— 12 pt +

log-out
 devices
 recommendations
 settings

OFF

sets
 account
 save

Recommendations

Receive preference suggestions based on behaviour and circumstances. ON

other recommendation settings?

cancel save

Devices

Logged in:

2013/12/11 11:56
TPL Public

2013/12/11 11:56
Ben's laptop

2013/12/11 11:56
B's Nexus

done

Devices

Logged in:

2013/12/11 11:56
TPL Public

2013/12/11 11:56
Ben's laptop

2013/12/11 11:56
B's Nexus

done

All account settings under one space alternative

★ my preferences ⚙️ all preferences

🔍 Category name

enlarge add contrast speak

Text size

This is how most text will appear.

— 12 pt +

Magnifier OFF

log-out

account settings

sets account save

authentication recommendations logged in devices

Methods

LOGIN RFID USB QR CODE

** Recommended for security*

Email or username

Ben15

Password

Confirm password

Account recovery

Email

Recovery ID j"@";3\$U'2-: #|4

cancel save

authentication recommendations logged in devices

Receive preference suggestions based on behaviour and circumstances. ON

other recommendation settings?

cancel save

authentication recommendations logged in devices

Logged in:

2013/12/11 11:56
TPL Public

2013/12/11 11:56
Ben's laptop

2013/12/11 11:56
B's Nexus

done



usb detected:
applying preferences



usb ejected:
logging out



logging out

 **Remember to take USB key!**

Selecting a set brings up the 'my preferences' of that set
Indicators show which preferences have been modified from the 'Base set'

The interface is divided into two main sections. On the left, a dark blue sidebar contains a list of device sets: 'Base Set' (any devices, anytime), 'Night-time' (not applied to any devices, highlighted in yellow), and 'Office' (all devices at 330 Main Street, applied to current device). The 'Night-time' set is selected, and its 'edit settings' button is being clicked. On the right, the 'my preferences' view for the 'Night-time' set is shown. It features a teal header with 'my preferences' and 'all preferences' buttons. The 'Text size' preference is set to 24 pt, with a yellow callout box indicating it is 'modified from base set'. The 'Magnifier' preference is currently turned off. At the bottom, there are navigation links for 'sets' and 'account', and a 'save' button.

In order to apply the selected set to the current environment, user needs to select 'apply'
> this modifies conditions to allow for the current environment to use the set

'Edit settings' takes user into the advanced set settings

Conditions' tab allows user to manually adjust the environment a set gets applied under
Conditions are editable in all sets except the 'Base Set'
> the 'Base Set' is applied on all devices that are not effected by a conditioned subset

If a set has no conditions specified, it is not applied to any device

conditions | share | sync | history

Night-time

Use as Base Set Delete Set

Devices
+ add new

Applications
+ add new

Locations
+ add new

Time
+ add new

done

When adding a new condition, the current condition is presented as a recommendation
> in the case of time, current time inputted by default

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new

Applications
+ add new

Locations
+ add new

Time
11:30 to 15:30 add

done

If only one variable condition is added, the set will be applied at the specified condition during all of the unspecified variables
> set will be applied on 'all devices, applications, locations' during 21:30 to 06:30

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 06:30

done

Conditions can be edited and removed

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 06:30 change

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30 change

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

New variable condition added, changes how a set will be applied
> set will be applied within a 200m radius of 43.7000° N, 79.4000° W only during 21:30 to 07:30 on all devices and applications

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

conditions | share | sync | history

Night-time

Use as Base Set

Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

With map alternative

conditions | share | sync | history

Night-time

Use as Base Set


Devices
+ add new
all devices

Applications
+ add new
all applications

Locations
+ add new
all locations

Time
+ add new
21:30 to 07:30

done

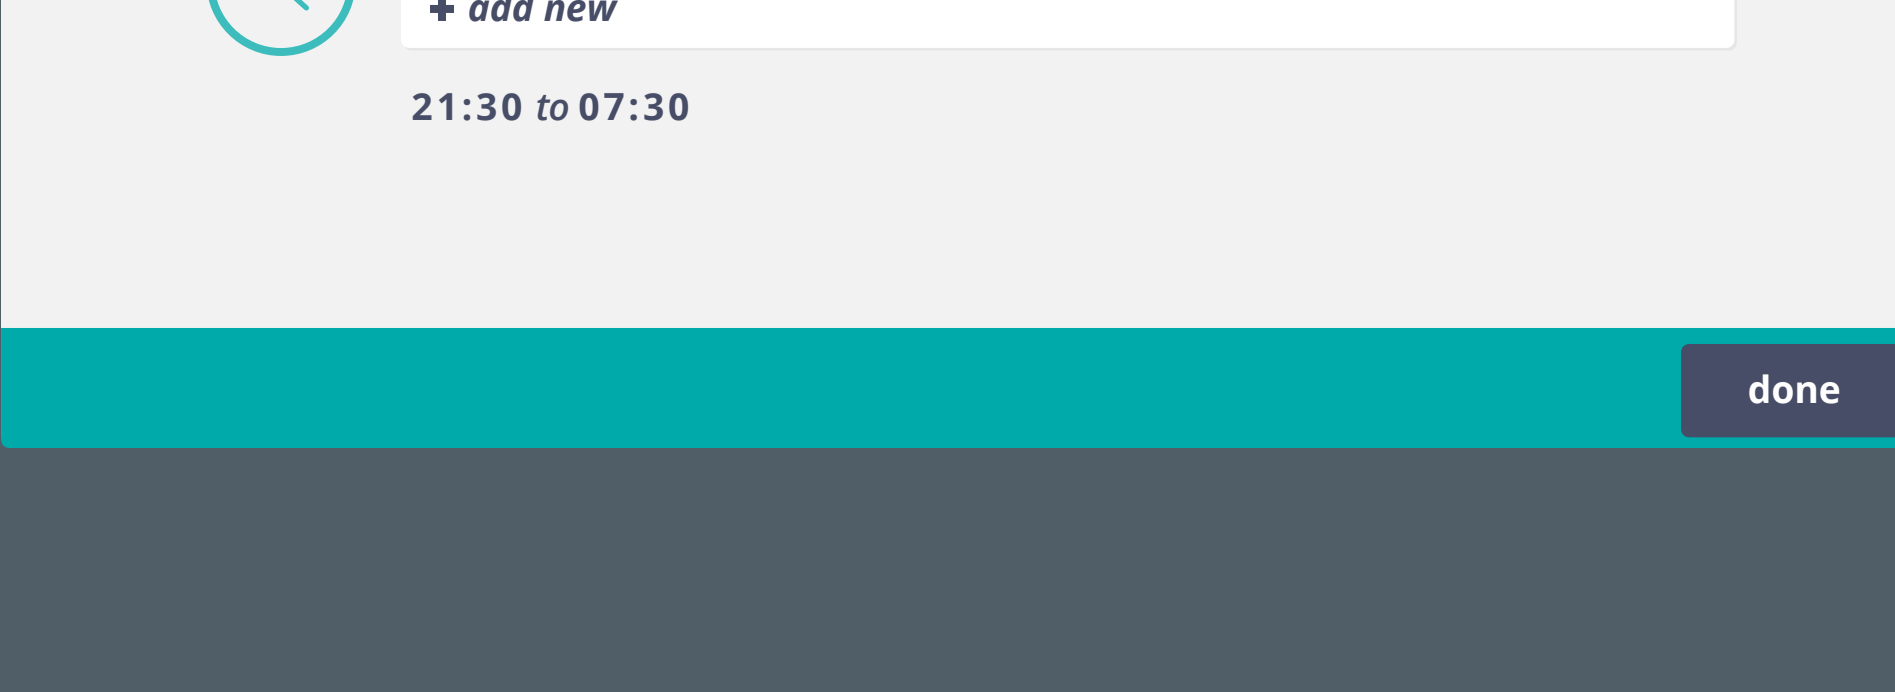



Any set could be made the 'Base Set', previous 'Base Set' will become subset


conditions share sync history

Night-time


[Use as Base Set](#)

 Devices

 Applications

 Locations

43.7000° N, 79.4000° W

 Time

21:30 to 07:30

done

conditions share sync history

Night-time

Making this your **Base Set**, would update the following devices currently using set:

- TPL Public
- Ben's laptop

Do you wish to continue?

cancel

done

+

★ my preferences ⚙ all preferences

Base Set
any devices, anytime

Base Set 2
Ben's laptop, anytime

Office
all devices at 330 Main Street
 applied to current device

Text size
 24 pt
★

Magnifier OFF ★

sets account

conditions

share

sync

history

Night-time

 link copy

 download copy

enter email address(es)

enter message (optional)

 email copy

done

conditions

share

sync

history

Night-time

add email address(es)

 invite to sync

Currently not syncing set with others.
Syncing updates the same preferences across multiple users.


done

If required, scrollbar is introduced

conditions share sync history


+ add new

all devices


 Applications

+ add new

all applications

 Locations

+ add new adress or cordinates

 Time

+ add new

21:30 to 07:30

done